




CALLER ID SLIM LINE PHONE

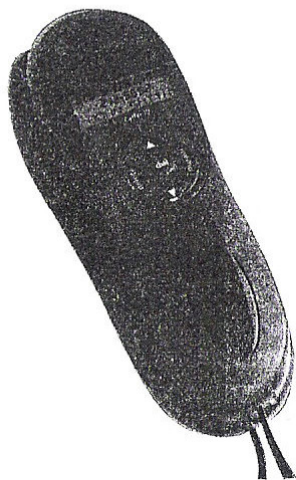

- 90 NAME AND NUMBER OF CALLER ID MEMORY
- DESK OR WALL MOUNTABLE
- 10 NUMBER MEMORY
- HANDSET VOLUME CONTROL
- REDIAL / FLASH FUNCTION
- HEARING AID COMPATIBLE

DESK MOUNTING

1. Connect the coil cord to the handset and base as shown in the diagram below.
2. Plug one end of the straight line cord into the jack at the bottom of the phone's base, and the other end into a modular wall telephone jack,
3. Pick up the handset and confirm you hear the dial tone.

WALL MOUNTING

To mount your telephone on a wall plate (not included), follow the instructions below :

1. Plug the straight line cord into a modular wall phone jack.
2. Align the holes on the base with the mounting studs on the wall plate.
3. Pull the base down onto the studs until the telephone is secure.

Setting up the Caller ID menu

IMPORTANT : Do not connect the telephone into the wall jack while setting up the Caller ID menu because an incoming call may invalidate the information not yet saved.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons to scroll through the options below, and press the [dial] button to select the desired option you wish to set.

- ⊙ DATE / TIME
- ⊙ LOCAL AREA CODE
- ⊙ REGIONAL AC'S-1
- ⊙ SELECT LANGUAGE
- ⊙ T/P DIAL MODE
- ⊙ EXIT SETUP

NOTE: Press the [flash] button to exit the setup menu, or the phone will exit automatically if there is no operation within 20 seconds and return to the "NO CALLS" screen.

DATE AND TIME

The date and time is programmed automatically when the first Caller ID record is received. It is also possible to set the date and time manually if desired.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons and select "DATE/TIME" and press the [dial] button to enter.
3. Use the [▲] or [▼] buttons to set the hour, minute, AM/PM, month, and day.
4. Press the [dial] button to confirm your selections.

The telephone uses the programmed area code to determine the number format to display when receiving Caller ID information. It is also used for the dial back feature.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons and select "LOCAL AREA CODE" and press the [dial] button to enter.
3. Use the [▼] button to select the first digit and press the [▲] button to confirm and skip to the next digit.
4. Use the [delete] button to edit, and press the [dial] button to confirm.
5. Use the same method to set the rest of the digits.

NOTE : You can also use the keypad to set the area code.

REGIONAL AREA CODES

Similar to programming local area codes, programmed regional area codes allow the phone to determine the number format to display when receiving Caller ID information. Calls matching any of the programmed regional area codes are displayed as 10 digits.

This is helpful for areas that have multiple or overlapping area codes that require 10 digit dialing.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons and select "REGIONAL AC'S-1" and press the [dial] button to enter.
3. Use the [▼] button to select the first digit and press the [▲] button to confirm and skip to the next digit.
4. Use the [delete] button to edit, and press the [dial] button to confirm.
5. Use the same method to set the rest of the digits. Up to 6 regional area codes may be programmed.

NOTE : You can also use the keypad to set the regional area codes.

SELECT LANGUAGE

This setting allows you to choose the language for the display information.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons and select "SELECT LANGUAGE" and press the [dial] button to enter.
3. Use the [▲] or [▼] buttons to select the desired language.
4. Press the [dial] button to confirm.

Choose Tone or Pulse dialing.

1. Press and hold the [dial] button until the display shows "SET ◀ OR ▶".
2. Use the [▲] or [▼] buttons and select "T/P DIAL MODE" and press the [dial] button to enter.
3. Use the [▲] or [▼] buttons to select the desired dial mode.
4. Press the [dial] button to confirm.

EXIT SETUP

When "EXIT SETUP" is displayed press the [dial] button exit.

Telephone

SWITCHING THE RINGER ON OR OFF

Slide the ringer switch to the "OFF" position to turn the ringer off. The ringer will not be activated by any incoming calls. Don't forget to turn the ringer "ON" when you are ready to receive calls, otherwise you will not hear the ringing sound during incoming calls.

NOTE: When the ringer switch is in the "OFF" position, the lighted ring indicator will still alert you to incoming calls.

To turn the ringer "ON" or "OFF", use the switch located on the left side of the handset.

ADJUSTING THE HANDSET VOLUME

To adjust the handset volume use, the switch located on the right side of the handset.

REDIAL

To redial the last number called use the redial feature. This feature is useful when the number you are calling is busy.

1. Pick up the handset.
2. Press the [redial] button.
3. The last number called is redialed.

FLASH

The Flash feature is used to activate calling services available through your local phone company, such as Call Waiting, and Three Way Calling. To use the features below you must subscribe to these services from your local telephone company.

To answer an incoming call while having a conversation :

After you hear the Call Waiting tone, press and release the [flash] button. The first call is placed on hold and the second call is answered.

To return to the first call and put the second call on hold :

Press and release the [flash] button again to return to the first call, the second call will be put on hold.

To activate Three Way Calling :

Press and release the [flash] button while in the first call, you will hear a dial tone. Dial a second number, and press the [flash] button again to connect the two calls.

MUTE

To temporarily prevent the person on the other end of the line from hearing your conversation, press the [mute] button. To deactivate mute, press the [mute] button again.

MEMORY

This telephone can store up to 10 of your most frequently dialed phone numbers.

Storing frequently called numbers

1. Pick up the handset.
2. Press the [memo] button, the display shows "MO-M9".
3. Push the desired memory location (0-9) on the handset keypad, and press the [memo] button to confirm.
4. Use the keypad to enter the telephone number and press [memo] button to confirm.
5. Use the keypad to enter the name and press the [memo] button to confirm and exit.
6. NOTE : Use the [redial] button to insert a pause when a delay is needed in an automatic dialing sequence.

Changing a stored number

Repeat the storage sequence above, the new number will replace the previously stored number at that memory location.

Dialing a stored number

1. Pick up the handset.
2. Press the [auto] button on the handset keypad.
3. Press a memory location (0-9) and the stored number will be dialed automatically.

OR

1. Pick up the handset
2. Press the [memo] button.
3. Use the [▲] or [▼] buttons to select a memory location from the display.
4. Press the [dial] button, to dial that number

Copying a number from the Caller ID memory

You can copy a number from the Caller ID memory by following the steps below.

1. Pick up the handset.
2. Use the [▲] or [▼] buttons to select a number from the Caller ID memory list.
3. Press the [memo] button, and select a memory location (0-9) from the keypad.
4. Press the [memo] button to confirm the memory location, press the [memo] button again to confirm the number, and press the [memo] button a third time to confirm the name and exit.


Caller ID

IMPORTANT : In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service from your local telephone company.

This telephone automatically displays an incoming caller's name and telephone number, as well as the date and time of the call.

It can record and store the information of up to 90 calls into the phone's Caller ID memory.

1. Name
2. Number
3. Time
4. AM/PM
5. Date
6. Low Battery Indicator
7. New Calls

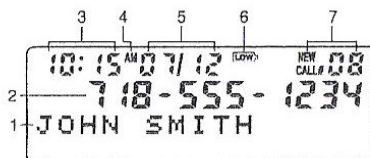

Receiving Caller ID Information

When you receive a call, the caller's information is displayed, allowing you to decide whether or not to answer the call. If you are away from home or unable to answer the phone, the information for up to 90 of the most recent calls will be stored into the telephone's Caller ID memory. When receiving the 91st call, the oldest Caller ID record will be deleted.

Reviewing Caller ID Information

To review the information of your received calls which are stored in the phone's Caller ID memory, use the [▲] or [▼] buttons.

Deleting Caller ID Information

1. Use the [▲] or [▼] buttons to select the caller information you wish to delete.
2. Press the [delete] button.

NOTE : to delete all Caller ID information, press and hold the [delete] button until the display shows "ERASE ALL?" then press the [delete] button again to confirm. All Caller ID records will be erased.

Dialing back a number from Caller ID memory

When reviewing Caller ID information, you may dial back the phone number displayed by pressing the [dial] button.

If the phone is ON the base :

1. Use the [▲] or [▼] buttons and select the number you would like dialed from the Caller ID memory.
2. Press the [dial] button, the display shows "PICK UP OR ADJ".
3. Pick up the handset and the displayed number will be dialed automatically.

NOTE : Depending on how the incoming caller's phone number is formatted when it's received, and whether or not you previously pre-programmed your local area code into the setup menu, you may need to adjust the format of the incoming caller's stored phone number before making the call. Press the [dial] button to scroll through different dialing options (7,10, or 11 digits).

If the phone is OFF the base

1. Use the [▲] or [▼] buttons to select the number you would like dialed from the Caller ID memory.
2. Press the [dial] button.
3. The display shows "ADJUST"
4. A three second timer begins allowing you to adjust the number format to either 7, 10, or 11 digits depending on your local area code, and calling region.
5. Press the [dial] button to scroll through the different dialing options (7, 10, or 11 digits).
6. When the three second timer runs out, the displayed number is called automatically.

Caller ID display messages

NO CALLS – The Caller ID memory is empty.

UNAVAILABLE – The incoming call does not have Caller ID service. If "UNKNOWN CALLER" appears along with a calling number, the name information for that number is not available.

LOW – The battery power is low, and the batteries need to be replaced as soon as possible. Please remember to use alkaline batteries, and do not mix old and new batteries.

BLOCKED CALL – The incoming call is registered as a private number, and caller ID information is withheld.

NEW CALL – Indicates call or calls that have not been reviewed.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

=