

Quick Guide

1. Using a telephone cord, connect your telephone to the PHONE port of the 821121-ATA-PAK.
2. Connect an Ethernet cable between your ADSL/Cable modem or router and the WAN port of the 821121-ATA-PAK.
3. Connect an Ethernet cable between the LAN port of the 821121-ATA-PAK and the Ethernet port of your computer.
4. Connect the power cord to the POWER port on the 821121-ATA-PAK. Plug the other end into a standard electrical outlet.
5. The POWER and VoIP/PSTN LEDs will light when power is applied. When the VoIP/PSTN LED goes out, the unit is ready to configure.
6. The units are shipped with a Static IP address of 192.168.1.100. To configure the unit, open your web browser to <http://192.168.1.100:9999/> . The default user name is **root** and the default password is **test**. Note that this may require setting a static IP address for your computer in the 191.168.1.xxx range. You **MUST** enter the :9999 at the end of the address as shown above.
7. To set the unit to DHCP from the attached telephone, first dial **#190#**. You will hear two beeps. Hang up the phone for at least 5 seconds, then come off hook and dial **#111#**. The unit will then reboot. After reboot, the VoIP/PSTN LED will flash briefly. Continue to wait until the VoIP/PSTN LED flashes again. This will be approximately 20 seconds after the first flashing. The IP address is not set until after the second LED flashing.
8. To find the IP address of the unit, dial **#90#** from the telephone. The unit will speak the IP address in the handset.
9. You can then configure the unit as described in Item 6 above using the dynamic IP address instead of 192.168.1.100.
10. From this page, you can configure all the parameters of the 821121-ATA-PAK. Remember to save your changes before you exit.
11. To restore factory defaults press the reset button for more than 5 seconds. The reset button is accessed through a small hole on the bottom of the unit.
12. The unit defaults to VoIP telephony. To make a VoIP call, just pick up the telephone handset and dial the VoIP number. Dial **"#"** after the VoIP number to dial immediately or wait 5 seconds. To make a PSTN call dial **#99#** before dialing the PSTN telephone number. The VoIP/PSTN LED is orange during a VoIP call and green during a PSTN call.

