


Expansion Module EXP39

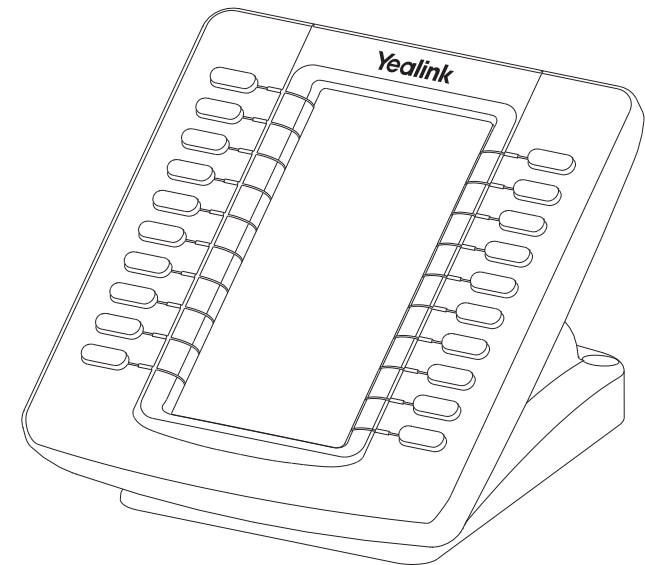

Quick Installation


This manual is only for reference, please refer the user manual for more information.
We reserve the right to improve or change the product and the user guide without notice.
You can download the latest user manuals from our website:
<http://www.yealink.com/en/download.asp?BigClassName=IP%20Phone>

V51.1


www.yealink.com

V51.1


Packing List

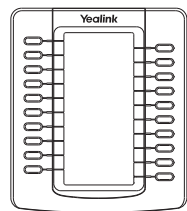


Expansion module

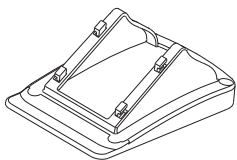

Stand

 

connecting sheet

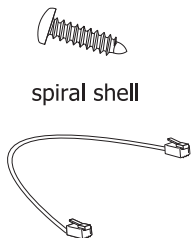


spiral shell


connecting cord

Connect to the Phone

1. Use the connecting sheet and screw to connect the EXP39 to the IP phone. Shown as:

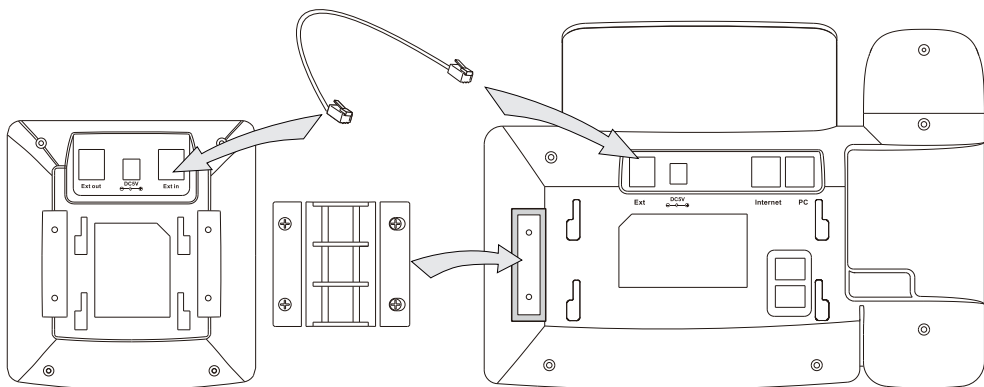


2. Your phone and the expansion module will be connected as the following picture shows:

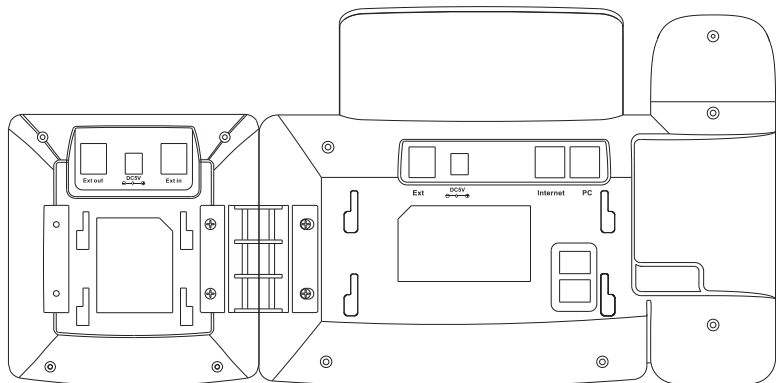


Connect to the next module

1. Follow the same step to connect the next expansion module:

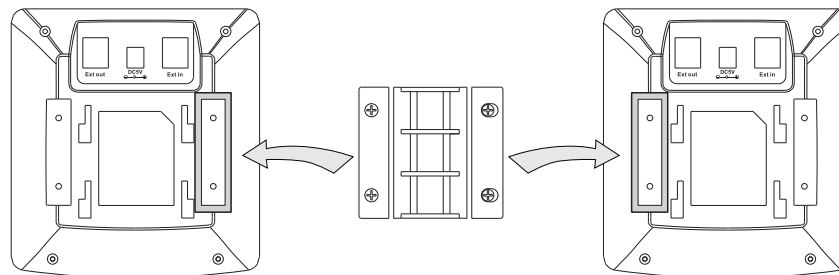


2. After the installation, it will be shown as:

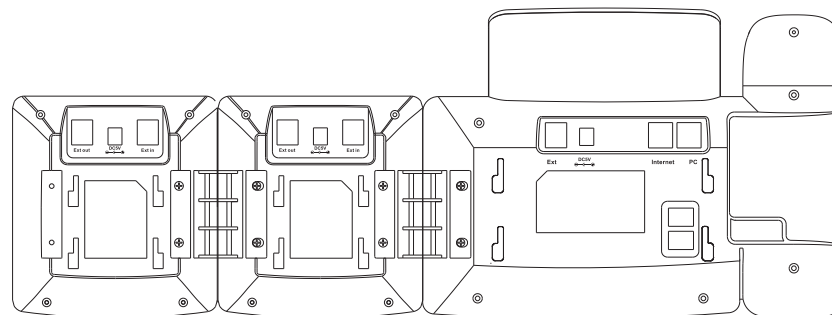

Note: Our IP phone T28P can support six expansion modules at most. But if you use more than two expansion modules, you need to connect an additional power adapter to anyone of the expansion modules.

Connect the cords

Plug the connecting cord into the Ext jack of the IP phone, the next port to the Ext in jack of the first module; If you want to connect more than one module, then go on to plug another cord into the Ext out jack, and the other port to the Ext in jack of the second module. Shown as the following picture:

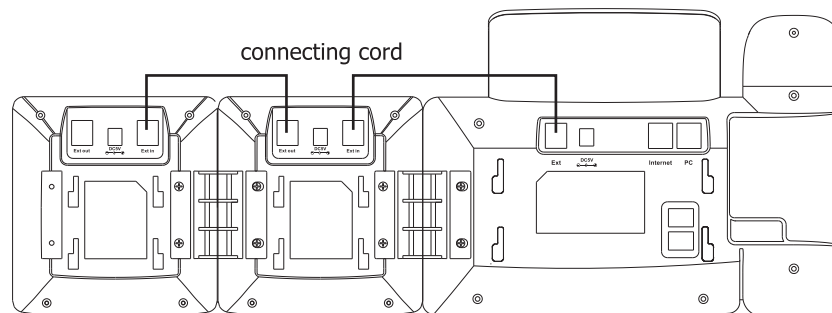

Then attach the stand and the power adapter, connect handset and headset to use.

Note: Users can connect six modules at most. Connect the Ext in port of the previous module and the Ext out port of the next module with an connecting cord will be ok.