

Mounting the Cortelco 2554 Telephone on a Wall Jack

The Cortelco 2554 Telephone is designed to be mounted on a standard RJ-11 wall jack. This jack is pictured below.




The jack must have mounting posts in order to hold the 2554. Also, note that the jack must be mounted so that the small cutout is at the bottom of the plastic jack.

The 2554 has two different ways of connecting to the line. Newer phones will have a short line cord (pigtail cable). Older phones will have a gray sliding jack.


Pigtail Cable Version

To mount the phone, plug the connector on the line cord into the wall jack. Then place the mounting holes over the mounting posts in the jack and slide the phone down to latch it to the jack.

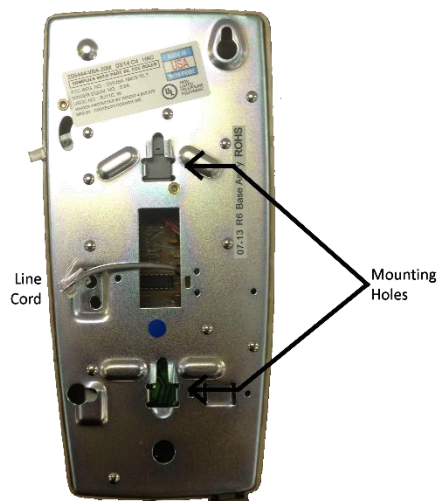

Sliding Jack Version

To mount the phone, slide the connector to the top of the slot, place the mounting holes over the mounting posts and insert the connector into the wall jack. Press the phone securely into the jack, and then press it down to latch the phone to the jack.

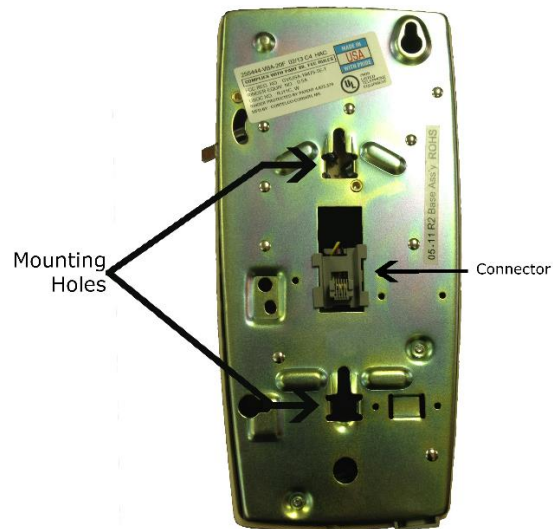

Some wall jacks may not be compatible with the sliding jack version of the 2554. Cortelco recommends the following jacks:

Manufacturer	Part Number
Leviton	CO256-SS
Allen-Tel	AT630A-4
IDC	ICC-IC630DA6SS
IDC	ICC-IC630DB6WH
IDC	ICC-IC630DB6IV