

OWNER'S INSTRUCTION MANUAL



**Four Line Auto-Attendant/Answering System
MODEL 2750**

Table of Contents

1.	UNPACKING AND INSTALLATION.....	4
1.1	Box Contents	4
1.2	Telephone Part Identification	5
1.3	Installation	6
1.3.1	Overview	6
1.3.2	Before Installation	6
1.3.3	Installation Configurations	6
1.3.3.1	Standard Configuration	6
1.3.3.2	Private Line	6
1.3.3.3	Unconnected Lines	6
1.3.3.4	Line 1	6
1.3.4	Phone Installation	7
1.3.4.1	Desk Mount.....	7
1.3.4.2	Wall Mount.....	7
1.3.4.3	Install Batteries (Optional).....	7
1.3.4.4	Assign a Station Number	8
1.3.5	Test Installation.....	8
2.	SYSTEM PROGRAMMING	9
2.1	Station Number Assignment.....	9
2.2	Station Name Assignment	9
2.3	Line Configuration/Type	10
2.3.1	Line Connections/Configuration	10
2.4	Loop Voltage Detector	10
2.5	Ringer Configuration	12
2.5.1	Ring Timing.....	12
2.5.2	Distinctive Ringing	12
2.5.3	Off-Hook Ringing.....	13
2.6	Intercom Call Response	13
2.6.1	Configuring intercom call response:.....	13
2.7	Automatic Line Selection.....	14
2.8	Toll Restriction	14
2.8.1	To set the system's toll restriction access code:	14
2.8.2	Setting the restricted numbers	14
2.8.3	Allowed numbers	15
2.8.4	Toll restriction override.....	15
2.8.5.	Line restriction.....	15
2.9	System Privacy	16
2.10	Dialing Mode.....	16
2.11	Area Codes	17
2.11.1	Home Area Code	17
2.11.2	Local Area Codes.....	17
2.11.3	1 Plus 7.....	17

3.	MEMORY SETTINGS	18
3.1.	Memory Features	18
3.1.1	Storing a hyphen into memory	18
3.1.2	Storing a dialing pause into memory	18
3.1.3	Storing a flash into memory	18
3.1.4	Storing temporary tone dialing into memory	18
3.1.5	Storing one of the last five numbers dialed into memory	18
3.1.6	Storing a Caller ID number into memory	18
3.2	To store a personal directory dial number	18
3.3	To Store Caller ID Records	19
3.4	To Store the Centrex Prefix	19
3.4.1	To Set the Centrex Prefix	19
4.	MISCELLANEOUS SETTINGS	19
4.1	Time and Date.....	19
4.2	Message Waiting Lamp	20
4.2.1	Message Waiting Line Selection	20
4.2.2	Message Waiting Mode Selection.....	20
4.3	Caller ID on Call Waiting (CIDCW) Sensitivity	20
4.4	Hold Call Reminder	21
4.5	Adjusting Auto Hold Drop Time	21
4.6	Adjusting Flash Timer.....	21
4.7	Erase Numbers Stored in Memory.....	21
4.8	Erase Toll Restrictions	22
4.9	Erase All Feature Settings	22
4.10	Reset Default Settings.....	22
5.	ANSWERING SYSTEM	22
5.1	Setting Answering Option	22
5.1.1	Turn on Answering Machine	22
5.1.2	Record your OGM	23
5.1.2.1	Reviewing your OGM.	23
5.1.2.2	Erasing your OGM.	23
5.1.2.3	Changing your OGM.	23
5.1.3	Setting Your Telephone's Pickup Delay	23
5.1.4	Setting Toll Saver.....	24
5.1.5	New Message Beep.....	24
5.1.6	Remote Code	24
5.1.6.1	Setting the remote code.....	25
5.1.6.2	Checking Messages Remotely	25
5.1.7	Setting Message Length.....	25
5.2	Auto-Attendant	25
5.2.1	Set up the Auto Attendant	26
5.2.2	Record the Auto Attendant Day OGM.....	26
5.2.3	Record the Auto Attendant Night OGM	26
5.2.4	Record the Auto Attendant Zero-Out OGM.....	27
5.2.5	Setting Auto Attendant Pickup Delay	27

5.2.6	Night Timer Set	27
5.2.7	Setting More Than One Phone as an Auto Attendant	28
5.2.8	Using Additional Auto Attendant OGMs	28
5.2.9	Setting Separate Auto Attendant OGM's for Different Lines.....	28
5.2.10	Turn Off the Auto Attendant on One or More Lines.....	28
5.2.11	Choosing the Zero-Out Action	29
5.2.12	All Transfer Feature	29
5.2.13	Leave a Message at the Auto Attendant	29
5.2.14	Set Night Message by Line	29
5.2.15	Transfer Directly to Voice Mail	30
5.2.16	Repeating the Main Menu and Messages.....	30
5.2.17	Summary of Auto Attendant Actions	30
5.3	Voicemail.....	30
5.3.1	Activation	31
5.3.2	Message Notification	31
5.3.3	Play Messages	31
5.3.4	Stop Message Playback.....	31
5.3.5	Pause Message Playback.....	31
5.3.6	Repeat a Message	31
5.3.7	Skip to the next Message.....	31
5.3.8	Jump Backward	32
5.3.9	Jump Forward.....	32
5.3.10	Saving a Message as New	32
5.3.11	Message Auto Save.....	32
5.3.12	Increase Playback Speed.....	32
5.3.13	Decrease Playback Speed.....	32
5.3.14	Erasing Messages.....	32
5.3.14.1	Erase a Single Message.....	32
5.3.14.2	Erase All Messages	32
5.3.15	Using Dial Pad.....	32
5.3.16	Recording a Memo or Conversation	33
5.3.16.1	Recording a Memo	33
5.3.16.2	Recording a Telephone Conversation	33
5.3.17	Screening Calls	33
6.	TELEPHONE OPERATION.....	33
6.1	Making and Answering Calls	33
6.2	Redial	34
6.2.1	To redial the last phone number dialed	34
6.2.2	To redial any of the last five phone numbers dialed	34
6.3	Hold.....	34
6.3.1	Placing a Call on Hold	34
6.3.2	Making a call on another line	34
6.3.3	Answering a call on another line	34
6.4	Conference	34
6.4.1	Outside Calls	35

6.4.2	Outside Call with Intercom Station	35
6.5	Transfer	35
6.5.1	Attended Transfer.....	35
6.5.2	Blind Transfer	35
6.5.3	Transfer Ring	35
6.5.4	Personal Ring.....	36
6.6	Caller ID.....	36
6.6.1	Incoming call	36
6.6.2	Call Waiting Caller ID	36
6.6.3	Caller List.....	36
6.6.3.1	Reviewing Calls	36
6.6.3.2	Dialing Calls.....	37
6.6.3.3	Deleting Numbers.....	37
6.7	Volume Levels	37
6.7.1	Ringer.....	37
6.7.2	Handset.....	37
6.7.3	Speakerphone	37
6.7.4	Intercom Speaker	37
6.7.5	Discrete alert.....	37
6.8	Voice Mail (Message Waiting)	37
6.8.1	Accessing Messages.....	38
6.8.2	Resetting MSG Lamp	38
6.9	FLASH.....	38
6.10	Mute	38
6.11	Do Not Disturb (DND)	38
6.12	Line Reserve.....	39
6.13	Call Privacy	39
6.14	Toll Restriction	39
6.14.1	Toll Restriction Removal (Single Call).....	39
6.14.2	Toll Restriction Removal (Single Station)	39
6.15	Timer	39
6.15.1	Elapsed Call Time.....	39
6.15.2	Timer Reset	40
6.15.3	Elapsed Call Time (Previous Calls)	40
6.16	Headset.....	40
6.17	Directory Card	40
6.18	Personal Directory	40
6.19	Predialing	40
6.20	Intercom Calls	40
6.20.1	Intercom while Idle.....	41
6.20.2	Intercom while on an Outside Call	41
6.20.3	Answering Intercom Calls.....	41
6.20.3.1	Intercom Ring.....	41
6.20.3.2	Intercom Voice.....	41
6.20.3.3	Intercom Handsfree	41

6.20.3.4	Answering an Intercom Call while on an Outside Call	41
6.21	Paging.....	41
6.21.1	Single Page	41
6.21.2	All Page	41
6.21.3	Blocking Pages	42
6.21.4	Answering Pages.....	42
6.21.4.1	Single Page.....	42
6.21.4.2	All Page.....	42
6.22	Room Monitoring	42
7.	USING STANARD TELEPHONES	42
7.1	Line Status and Calls on Hold	43
7.2	Call Privacy	43
7.3	Intercom	43
7.4	Fax Machines and Modems.....	43
8.	POWER FAIL OPERATION	43
APPENDIX A	44
Menu Tree.....		44
Phone Settings		44
Answer Settings		46
Memory Settings.....		47
Time and Date Settings		47
Advanced Settings		47
APPENDIX B - Installation Worksheet		48
APPENDIX C - Toll Restriction Worksheet		49
APPENDIX D - Trouble Shooting Guide		50
FCC INFORMATION.....		51
TELEPHONE REPAIR.....		52
LIMITED WARRANTY		53

THANK YOU
FOR PURCHASING THE
2750
Four Line Auto-Attendant/Answering Telephone

We want you to know all about your new Telephone.

How to install it, the features it provides, and the services you can expect from its use. We have included this information in your Owner's Instruction Manual.

The 2750 is one of our new Series 7 Telephones. It is a stand alone 4-Line Telephone or part of a 4-Line system consisting of up to 16 stations of 2740's, 2742's, or 2750's. The 2740 is our base unit. It has 4 line buttons, Intercom, Conference, Page, Transfer, Mute, Headset, Flash, Redial, Hold, 5 memory dial buttons, 40 Number Personal Directory, Type II Caller ID, Speakerphone, and 2.5mm Headset Jack.

The 2742 Analog Adapter will support attaching an analog telephone to your 4-Line system. For example you can connect a cordless telephone, fax machine, or modem. These units will have an extension number and can share all 4 lines.

The other telephone in our system is the model 2740. The 2740 has the same features as the 2750 except for the Answering System.

PLEASE READ BEFORE INSTALLING AND USING YOUR NEW TELEPHONE EQUIPMENT.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using your telephone equipment to reduce the risk of fire, electrical shock, and injury.

1. **Read and understand all instructions** in the Owner's Instruction Manual.
2. **Read all warnings** and follow all instructions marked on the product.
3. **Unplug this product from the wall outlet before cleaning.** Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
4. **Do not use the telephone near water.** For example, do not use near a bathtub, wash bowl, kitchen sink, laundry tub, swimming pool, or in a wet basement.
5. **Do not place this product on an unstable cart or stand.** The product may fall causing serious damage to the product.
6. **Use only the type power source indicated on the label.** If you are not sure of the type power supply to your home, consult your dealer or local power company.
7. **Do not place any objects on the telephone line cord.** Do not locate the telephone where the line cord will be walked on.
8. **Do not block or cover ventilation slots and openings** in the bottom of the telephone. The openings should never be blocked by placing the telephone on a bed, sofa, rug, or other similar surfaces. The telephone should never be placed near or over a radiator or heat register. The telephone should never be placed in a built-in installation unless proper ventilation is provided.
9. **Never spill liquid on the telephone or push objects of any kind through ventilation slots.** Liquid or objects may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
10. **Do not disassemble this product.** Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electrical shock when the product is subsequently used.
11. **Do not overload outlets and extension cords.** Some telephones require AC power from an outlet. Overloading the outlets can result in the risk of fire or electric shock.
12. **Avoid using a telephone during a local thunderstorm.** There may be a remote risk of electrical shock from lightning.
13. **Use only the power cord and batteries indicated in this manual.** Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
14. **Do not use a telephone to report a gas leak in the vicinity of the leak.**

1. UNPACKING AND INSTALLATION


1.1 Box Contents

The following items should be packed with your 2750. Please contact your dealer if any of them is missing.



2750 Phone (Main Body)	1 pcs
Handset	1 pcs
Handset Cord (Coiled Cord)	1 pcs
Line Cord 7ft	2 pcs
Short Line Cord 7"	1 pcs
Desk Stand	1 pcs
Power Adapter (Transformer 9VDC 500 ma)	1 pcs
Quick Start Guide	1 pcs
User Manual on Mini CD	1 pcs

1.2 Telephone Part Identification

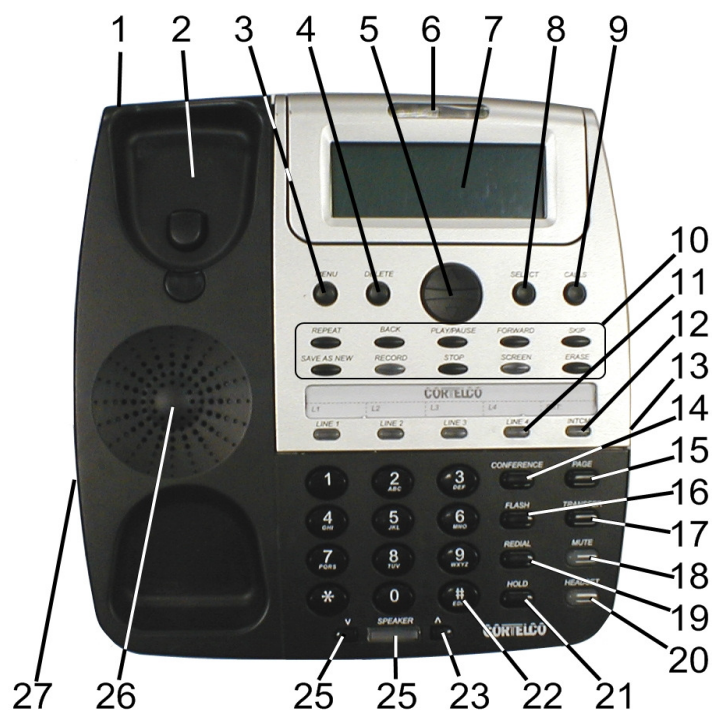

1	Telephone Base	10	VM Buttons (See below)	19	Redial Button
2	Handset Cradle	11	Line Buttons	20	Headset Button
3	Menu Button	12	Intercom Button	21	Hold Button
4	Delete Button	13	2.5mm Headset Jack	22	Key Pad Buttons
5	Review Up/Down Btn	14	Conference Button	23	Volume Up Button
6	Message Lamp	15	Page Button	24	Speaker Button
7	Multi-Angle LCD	16	Flash Button	25	Volume Down Button
8	Select Button	17	Transfer Button	26	Speaker
9	Calls Button	18	Mute Button	27	Handset Jack

Voice Mail Buttons (Item 10)



1.3 Installation

1.3.1 Overview

The 2750 is part of the 7 Series Multiline phone system. Up to 16 instruments may be connected in this system. All these devices use conventional telephone wiring. Wiring runs between stations may be a maximum of 600 feet.

1.3.2 Before Installation

In order to install your telephones correctly, you must determine the incoming wiring configuration. In most cases, incoming lines will be terminated in either RJ11 Single Line Jacks or RJ14 Double Line Jacks. If you are not sure of your incoming line configuration, contact your telephone line installer. All connection between the wall jacks and the telephones may be done with standard telephone modular cords. Please be sure that your modular cords have at least 4 wires in them.

If you have RJ11 jacks, you will need two line adapters (not included) to connect to the 2750. These couplers take the single line wiring and convert it to double line wiring. These couplers should be available where you purchased your 2750.

1.3.3 Installation Configurations

1.3.3.1 Standard Configuration

The 2750 is initially configured so that each line is common at all stations. In other words, Line 1 at each telephone is connected to the same incoming line; Line 2 at each station is connected to the same incoming line, etc. This is commonly known as a “square system.” If this is suitable for your installation, you only need to connect the telephones to the telephone lines.

1.3.3.2 Private Line

A private line is connected to only one telephone in the system. No other phones in the system have access to this telephone line.

1.3.3.3 Unconnected Lines

It is also permissible to leave one or more lines unconnected.

1.3.3.4 Line 1

Line 1 **MUST** be connected to the same incoming line on all phones for the system to function correctly.

1.3.4 Phone Installation

1.3.4.1 Desk Mount


- Connect the power adapter to the jack on the bottom of the phone. Plug the adapter into a wall outlet which is not controlled by a wall switch. Use only a 9V DC 500mA, Class 2 adapter.
- Connect the line cords. If you have RJ14 line jacks, you need only connect 4 wire line cords between the wall jacks and the jacks in the base of the 2750. If you have RJ11 line jacks, you will need 2 line couplers as discussed in Section 1.3.2. Note that the jacks on the 2750 are numbered L1/L2 and L3/L4. Connect your incoming lines accordingly.
- Select the desired viewing angle and install the desk stand. The desk stand can be installed in two positions to give a choice of viewing angle.
- Plug the coiled cord into the handset jack, and plug the other end of the cord into the base.
- Place the handset on the base.

1.3.4.2 Wall Mount


- Remove the desk stand. The unit will then mount directly on a standard wall telephone jack.
- Connect the power adapter and the line cords. See Steps “a” and “b” above. Use the included short line cord to connect to the mounting jack. Use one of the included long line cords to connect to the other jack.
- Mount telephone to wall jack (RJ-11W).
- Plug the coiled cord into the handset, and then plug the other end of the cord into the base.
- Rotate the handset hook into the wall mount position and place the handset on the base.

1.3.4.3 Install Batteries (Optional)

The 2750 uses AC power from a standard wall outlet. As long as the telephone is connected to a wall outlet, it will operate using the AC power. **Please remember to plug your telephone into a wall outlet that is not controlled by a wall switch.** The 2750 uses 3 AAA batteries for backup power. These batteries fit into a compartment on the base of the telephone.

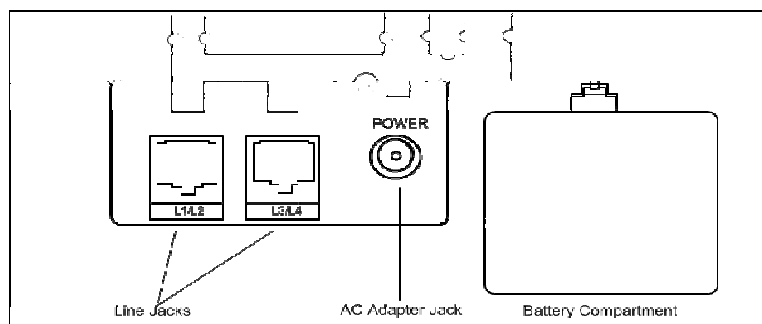

The display has a battery symbol whenever the batteries are low and need replacing or when no batteries are installed.

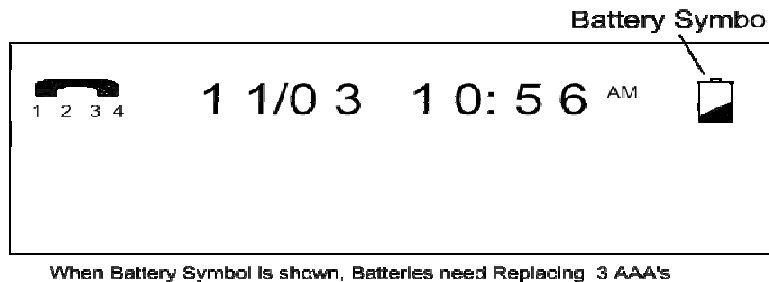

Follow the instructions below to install or replace the batteries.

- a. Make sure the AC cord is attached to the telephone and to a working electrical outlet.
- b. Turn the telephone over.
- c. Remove desk pedestal/wall mount bracket if attached.
- d. Remove battery door cover by using the tip of a ball-point pen, paper clip, or similar object to release the battery door tab.
- e. Remove the old battery.
- f. Insert 3 new AAA size alkaline batteries. Note that we recommend **ONLY** alkaline batteries.
- g. Close the battery cover.

1.3.4.4 Assign a Station Number

Station 01 must be the first extension number assigned. Station 01 is required for programming features on the 2750. Refer to Section 2.1 for detailed instructions on assigning station numbers.

1.3.5 Test Installation

This procedure should be used at each telephone after initial installation. It may also be used if you are having problems with your system. First, verify the three items below at each telephone in the system.

- a. Verify that the AC power transformer is connected to the 2750 and to mains power.
- b. Verify that Line 1 is connected to the 2750.
- c. Verify that a station number has been assigned.

Now, verify that Line 1 has been connected correctly to all telephones.

- d. Press Line 1 at one telephone.
- e. Verify that the Line 1 LED is Green, the Speakerphone LED is red and that dial tone is heard.
- f. Verify that the Line 1 LED is red at each other station.

To verify the connection of lines 2 – 4, perform the following steps at each telephone.

- a. Press Line 1.
- b. Verify that the Line 1 LED is Green, the Speakerphone LED is red and that dial tone is heard.
- c. Dial the telephone number for Line 2. Verify that the Line 2 LED flashes slowly. If it does not flash, Line 2 may not be properly connected.
- d. Repeat the steps above using the telephone numbers for Lines 3 and 4 if applicable. Remember that Lines 2, 3, and 4 may not be common at all telephones.

2. SYSTEM PROGRAMMING

2.1 Station Number Assignment

Each station must be assigned a unique station number. **2750 telephones will not function correctly until a station number is assigned.** To assign a number to a station:

- Press **MENU**. The display will read “**Phone Setting**”
- Press the soft key under **ENTER**. The display will show the currently assigned station number.
- Press the soft key under **CHANGE** repeatedly, until the desired station number is displayed. The choices are Station #01 through Station #16.
- Press **MENU** to exit.

Note: One phone in the system must be set as Station #01 in order for all the system features to function. Certain Features can only be programmed at station 01 and will only function at station 01.

2.2 Station Name Assignment

You may give a name to each of your telephones. During Intercom calls, the name that is assigned to the station will show with the Extension Number. Please note that it may take up to 24 hours for all stations to be updated with a name change. **Station names must be assigned at Station 01.** Follow the steps below to assign a station name.

- Press **MENU**. The display will read “**Phone Setting**”
- Press soft key under **ENTER**.
- Press the **Down Arrow** repeatedly until the display reads “**Station Naming**”
- Press soft key under **ENTER**. The display will show the currently stored name for station #01, or indicate “No Name” if no name has yet been given to station #01.
- Press soft key under **CHANGE** if you wish to store a new name for station #01, or press **DOWN ARROW** repeatedly until you see the station number that you want to name, and then press soft key under **CHANGE**.
- Use the dialpad numbers to enter the name for the desired station. Names may contain up to 16 characters.
- Press the soft key under **SAVE**.

Repeat these steps for any additional stations you wish to name. The following table below shows which dialpad numbers to press for letters and special characters. Press the down arrow button below the display to leave an empty space. Press the **DELETE** button to make corrections.

0	0								
1	,	-	'	&	.	()	1	
2	a	b	c	2	A	B	C		
3	d	e	f	3	D	E	F		
4	g	h	i	4	G	H	I		

5	j	k	l	5	J	K	L		
6	m	n	o	6	M	N	O		
7	p	q	r	S	7	P	Q	R	S
8	t	u	v	8	T	U	V		
9	w	x	y	Z	9	W	X	Y	Z
*	*								
#	#								

2.3 Line Configuration/Type

While Line 1 must be shared at all stations, Lines 2, 3 or 4 may be unconnected or may be connected to private lines.

COMMON: This is the factory setting for all lines. This setting assumes that the line is connected to the same telephone number at all stations.

PRIVATE: Use this setting at any telephone that is connected to a different telephone number than the corresponding line at the other stations. For example, you may connect your private telephone number to Line 3 at your station instead of connecting your station to the common Line 3. In this example, you would set Line 3 at your station as PRIVATE.

UNCONNECTED: Use this setting at any telephone that is not physically connected to all of its lines.

2.3.1 Line Connections/Configuration

- Press **MENU**. The display will read “**Phone Setting.**”
- Press soft key under **ENTER**.
- Press the **DOWN ARROW** repeatedly until the display reads “**Line Connections.**”
- Press soft key under **ENTER**. The display will show the line connection setting for Line 2.
- Press the soft key under **CHANGE** repeatedly, until the desired line connection setting for Line 2 is displayed. The choices are:
 - L2: COMMON (factory setting)
 - L2: PRIVATE
 - L2: UNCONNECTED
- Press the soft key under **NEXT** to see the current setting for Line 3, and repeat steps c, d, and e to change the settings for Lines 3-4.
- Press **MENU** to exit.

2.4 Loop Voltage Detector

The status indicators of your 2750 telephone are designed to light when a fax machine, modem, or standard telephone is using a line. If the line status indicators of your 2750 telephones light when no telephone is using the line or do not light when a standard telephone is using the line, the loop voltage detector setting may need to be adjusted. The factory setting of 48 volts is appropriate for most

installations. This value can be changed to either 24 volts or 12 volts or the feature can be turned off.

To set Loop Voltage Detector

- a. Press **MENU**.
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display.
- c. Press soft key under **ENTER**.
- d. Press **DOWN ARROW** repeatedly until “**Loop Detect:**” appears in the display, along with the current setting

- e. Press the soft key under **CHANGE** repeatedly until the desired loop detect setting is displayed. The choices are:
 - Loop Detect: 48V (factory setting)
 - Loop Detect: 24V (24 volts)
 - Loop Detect: 12V
 - Loop Detect: OFF
- f. Press **MENU** to exit.

If a line indicator at your 2750 telephone stays lit because there is no telephone line connected, and you wish to turn it off, do not use this feature, but set this line at this station to UNCONNECTED

2.5 Ringer Configuration

The ringers for each outside line are controlled individually at each telephone. There are three possible settings for each line ringer:

RINGER ON: The line will ring normally.

DELAYED RING: The line will start ringing after the first 20 seconds. This is useful if all phones are answered at a central location.

RINGER OFF: The line will not ring. In all these cases, the line indicators will flash to signal an incoming call.

You can always answer a ringing line, whether or not it is ringing audibly at your telephone, by pressing the flashing line button.

2.5.1 Ring Timing

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press soft key under **ENTER**.
- c. Press the **Down Arrow** repeatedly until “**Ringer Settings**” appears in the display.
- d. Press soft key under **ENTER**. The display will show the current ringer setting for Line 1.
- e. Press the soft key under **CHANGE** repeatedly, until the desired ringer setting for Line 1 is displayed. The choices are:
 - L1 Ringer: ON (factory setting)
 - L1 Ringer: DELAY
 - L1 Ringer: OFF
- f. Press the soft key under **DOWN ARROW** to see the current ringer setting for Line 2. Repeat steps c - e to change the ringer settings for Lines 2-4.
- g. Press **MENU** to exit.

2.5.2 Distinctive Ringing

All lines are initially set to ring with Ring Sound #1. Each outside line may be assigned one of seven other distinctive ringer tones. This can be used to easily identify a ringing line or ringing phone. To assign distinctive rings to one or more lines:

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the **DOWN ARROW** repeatedly until “**Distinctive Ring**” appears in the display.
- c. Press soft key under **ENTER**. The display will show the distinctive ring setting for Line 1.

- d. Press the soft key under **CHANGE** repeatedly, until the desired distinctive ring setting for Line 1 is displayed. There are eight choices.
- e. Press the **DOWN ARROW** to see the current setting for Line 2, and repeat steps c and d to change the settings for Lines 2-4.
- f. Press **MENU** to exit.

Note: When a distinctive ring setting is displayed, it may be heard by pressing the soft key under **CHANGE**.

2.5.3 Off-Hook Ringing

When a ringer is set to **ON** or **DELAYED**, an incoming call will cause a double ring every 15 seconds is the phone is in use. This feature is called “off-hook ringing” and can be disabled. To disable off-hook ringing

- a. Press **MENU**.
- b. Press the soft key under **NEXT** repeatedly until “Off Hook Ring” appears in the display, along with the current setting.
- c. Press the soft key under **CHANGE** to change the setting.
- d. Press **MENU** to exit.

Note: Off-Hook ringing does not function on intercom calls. However, the line lamps will flash to indicate an incoming call.

2.6 Intercom Call Response

The 2750 may be configured to respond to intercom calls in one of three ways:

INTERCOM HANDSFREE: When an intercom call is received, the telephone will ring once and then give a triple alert tone. The phone will then automatically answer the intercom call on speakerphone.

INTERCOM RING: When an intercom call is received, the telephone will ring repeatedly with the intercom ring. The call may be answered by lifting the handset or pressing the **SPEAKER** button.

INTERCOM VOICE: When an intercom call is received, the telephone will ring once and then give an alert tone. After this the calling party will be connected. To respond to the calling party, either lift the handset or press the **SPEAKER** button.

Note: When an intercom call is received while an outside call is in progress, the 2750 will ring with a single intercom ring regardless of the intercom ringer setting

2.6.1 Configuring intercom call response:

- a. Press **MENU**. The display will read **Phone Setting**
- b. Press soft key under **ENTER**.
- c. Press the **Down Arrow** repeatedly until **Intercom Prefs** appears in the display.
- d. Press soft key under **ENTER**. The display will show the current intercom setting.
- e. Press the soft key under **CHANGE** repeatedly, until the desired intercom setting is displayed.
- f. Press **MENU** to exit.

2.7 Automatic Line Selection

The 2750 will automatically select an outside line or the intercom line whenever the handset is lifted or the **SPEAKER** button is pressed. To choose which line will be automatically selected:

- a. Press **MENU**. The display will read **Phone Setting**
- b. Press the soft key under **ENTER**.
- c. Press the **DOWN ARROW** repeatedly until **Auto Seize** appears in the display. The display will show the current auto seize setting.
- d. Press the soft key under **CHANGE** repeatedly, until the desired setting is displayed. The choices are L1, L2, L3, L4 or INTCM.
- e. Press **MENU** to exit.

Note: An incoming call that will be selected automatically when the handset is lifted or the **SPEAKER** or **HEADSET** button is pressed, regardless of the automatic line selection choice. To select a non-ringing line, the desired **LINE** button must be pressed before lifting the handset.

Note: If the chosen line is in-use, the telephone will automatically select the next available line.

2.8 Toll Restriction

Toll Restriction enables control of outgoing calls. The 2750 accomplishes toll restriction by allowing entry of number strings which may not be dialed. This is done on a station-by-station basis so different phones may have differing toll restrictions. This may be used to help prevent unauthorized long distance calls.

For example, to prevent dialing of “900” numbers, the code 1900 should be entered as a toll restriction. This would prevent the station from dialing any numbers beginning with 1900.

A “#” character may be entered as a wildcard which matches either 0 or 1. If #900 had been entered in the example, the station would not dial numbers beginning with either 1900 or 0900.

A toll restriction access code is needed to change or add toll restrictions. This code must be set at station #01.

2.8.1 To set the system’s toll restriction access code:

At Station #01:

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the **DOWN ARROW** repeatedly until “**Toll Restriction**” appears in the display.
- c. Press the soft key under **ENTER**. The display will read “**Access Code:****.**”
- d. Press the soft key under **CHANGE** to store a new access code.
- e. Enter a 4 digit number.
- f. Press **MENU** to exit.

Note that the previous code is not needed to set a new code. The factory default code is 1234.

2.8.2 Setting the restricted numbers

After toll restrictions are set at a phone, they will be retained even after a power failure.

To set restricted numbers at a station

- a. Press **MENU**. The display will read **Phone Setting**
- b. Press the **DOWN ARROW** repeatedly until **Toll Restriction** appears in the display.

- c. Press the soft key under **ENTER**. The display will read **Enter Code:** [all stations other than #01]
- d. Enter the 4 digit toll restriction access code which was set at Station #01. A confirmation beep will sound and the display will read **Set Restricted #**
- e. Press the soft key under **ENTER**. The display will show the currently stored Restriction #1, or show **1:** if no Restriction #1 has been stored.
- f. Press the soft key under **CHANGE**.
- g. Dial desired restricted number, up to 6 digits.
- h. Press the soft key under **SAVE**.
- i. Press the **DOWN ARROW** and repeat steps f-h to store any additional restrictions at this station.

2.8.3 Allowed numbers

After setting toll restrictions, it is sometimes necessary to enter some exceptions which may be dialed. For example, if “1” had been entered to completely restrict long distance calls, toll free calls could be allowed by entering “1800” as an allowed number. The “*” character may be used as a wildcard which matches any digit. Allowed numbers may contain up to 10 digits.

To set allowed numbers at a station

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the soft key under **ENTER**.
- c. Press the **DOWN ARROW** repeatedly until “**Toll Restriction**” appears in the display.
- d. Press the soft key under **ENTER**. The display will read “**Enter Code:**”
- e. Enter the 4 digit toll restriction access code. A confirmation beep will sound and the display will read “**Set Restricted #**”
- f. Press the soft key under **NEXT**. The display will read “**Set Allowed #**”
- g. Press the soft key under **ENTER**. The display will show the currently stored Allowed #1, or **1:** if there is no Allowed #1 yet stored.
- h. Press the soft key under **CHANGE**
- i. Dial desired allowed number, up to 10 digits.
- j. Press the soft key under **SAVE**.
- k. Press the soft key under **DOWN ARROW** and repeat steps g-j if you wish to store any additional allowed numbers at this phone.

2.8.4 Toll restriction override

After setting toll restrictions for a station, its toll restriction is automatically ON. This may be temporarily overridden without affecting the settings stored in the telephone.

2.8.5. Line restriction

It is possible to restrict any or all of the lines at a particular station. That station will not be able to make any outgoing calls on the restricted lines, with the exception of the allowed numbers at that station and calls to 911. The station can still receive incoming calls on these lines, take calls off hold, and have full use of the intercom. This is normally used for phones which are placed in a public area.

To restrict one or more lines on a station:

- a. Press **MENU**. The display will read **Phone Setting**
- b. Press the **DOWN ARROW** repeatedly until **Toll Restriction** appears in the display.
- c. Press the soft key under **ENTER**. The display will read **Enter Code:**[all stations other than #01]
- d. Enter the 4 digit toll restriction access code. A confirmation beep will sound and the display will read "**Set Restricted #**"
- e. Press the **DOWN ARROW** repeatedly, until "**Line Restriction**" appears in the display.
- f. Press the soft key under **ENTER**.
- g. Press the soft key under **CHANGE** to select between **NORMAL** (factory setting) and **RESTRICTED**.
- h. Press the soft key under **DOWN ARROW** to see the current setting for Line 2, and repeat steps e - g to change the settings for Lines 2-4.
- i. Press **MENU** to exit.

2.9 System Privacy

Call privacy prevents stations from joining existing calls. Call privacy can be released during a call by pressing the **CONFERENCE** button. The default setting for Call Privacy is ON.

Call Privacy is set at Station #01 for the entire system. This choice does not appear on any phone except Station 01. Call privacy only applies to outside calls. Intercom calls always have call privacy.

To Change the Privacy Setting

At Station #01:

- a. Press **MENU**. The display will read "**Phone Setting**"
- b. Press the **DOWN ARROW** repeatedly until "**Advanced Setting**" appears in the display.
- c. Press the soft key under **ENTER**.
- d. Press **DOWN ARROW** repeatedly until "**System Privacy**" appears in the display.
- e. Press the soft key under **ENTER**. The display will show the current Call Privacy setting.
- f. Press the soft key under **CHANGE** repeatedly, until the desired call privacy setting is displayed.
- g. Press **MENU** to exit.

2.10 Dialing Mode

The 2750 can dial with either pulses or DTMF Tones. The mode is set at Station #01 for the entire system. If any of the incoming telephone lines have Pulse service, Pulse Dialing must be selected. If all the incoming lines have Tone Service, Tone Dialing should be selected. Tone Dialing is the default setting. To set the dialing mode:

At Station #01:

- a. Press **MENU**. The display will read "**Phone Setting**"
- b. Press the soft key under **DOWN ARROW** repeatedly until "**Advanced Setting**" appears in the display.
- c. Press the soft key under **ENTER**.

- d. Press the **DOWN ARROW** repeatedly until “**Tone/Pulse**” appears in the display. The display will show the current tone/pulse setting.
- e. Press the soft key under **CHANGE** repeatedly, to select either **TONE** or **PULSE** dialing.
- f. Press **MENU** to exit.

Note: If the system is set to Pulse Dialing, press the * button to change the dialing mode temporarily to tone during a call. This can be used to access services which require tone dialing. Dialing mode will revert to pulse when the call ends.

2.11 Area Codes

The 2750 can accept three sets of Area Codes.

2.11.1 Home Area Code

This is the area code for the area where the 2750 is located. Only one Home Area Code may be entered. After the Home Area Code is entered, only seven digits will be displayed when a call is received from within the Home Area Code. Also, only seven digits will be dialed when **REDIAL** is pressed.

2.11.2 Local Area Codes

These are area codes that require the area code plus seven digits to be dialed. A “1” is not dialed for these area codes.

2.11.3 1 Plus 7

These area codes are for calls that require “1” plus the seven digits to be dialed. Up to six **1 Plus 7** area codes may be entered. To enter area codes

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the soft key under **ENTER**
- c. Press **DOWN ARROW** until “**Area Codes**” appears in the display
- d. Press the soft key under **ENTER**. The HOME area code setting will be displayed.
- e. Press the soft key under **CHANGE** to change this setting
- f. Press **DOWN ARROW** to view the LOCAL setting
- g. Press the soft key under **CHANGE** to change this setting
- h. Press **DOWN ARROW** to view the 1 PLUS 7 area code settings.
- i. Press the soft key under **CHANGE** to change this setting

3. MEMORY SETTINGS

3.1. Memory Features

The 2750 can store up to 40 telephone numbers in its Personal Directory. These numbers can be dialed by pressing “#” followed by the arrow buttons. Characters other than numbers and telephone features may also be stored in the Personal Directory. See the sections below for more details.

3.1.1 Storing a hyphen into memory

To insert a hyphen into a stored number, press **PAGE** when a hyphen is desired. Hyphens are not dialed but can make it easier to read a telephone number.

3.1.2 Storing a dialing pause into memory

To insert a pause into a stored number, press **HOLD** when a pause is desired. Each press of **HOLD** will insert a 1.5 second pause. The display will show a “p” for each pause inserted.

3.1.3 Storing a flash into memory

To insert a flash into a stored number, press **FLASH** when a flash is desired. Each press of **FLASH** will insert a 600 millisecond (ms) flash. The display will show an “f” for each flash inserted. The flash time may also be changed to values other than 600 mSec.

Note: If 600ms is not an appropriate length for your installation, you may set a different value.

3.1.4 Storing temporary tone dialing into memory

To store a temporary switch to tone dialing in a memory location, press the * (**TONE**) button. All the remaining numbers will be dialed in tone mode.

3.1.5 Storing one of the last five numbers dialed into memory

To store a dialed number, press **REDIAL**. Then press the **UP** or **DOWN** key to scroll through the last five numbers dialed. When the desired number is displayed, press the Directory key (#) and press Yes to save or No to cancel.

3.1.6 Storing a Caller ID number into memory

To store a caller ID number, press **CALLS**. Then press the **UP** or **DOWN** key to scroll through the Caller ID list. When the desired number is displayed, press the Directory key (#) and press Yes to save or No to cancel.

3.2 To store a personal directory dial number

- a. Press **MENU**. The display will read “*Phone Setting*”
- b. Press **DOWN ARROW** until “*Memory Setting*” appears in the display
- c. Press the soft key under **ENTER**. The display will read “*Select Location*”
- d. Press **#**. The display will read “*Empty Location*,” or indicate that the personal directory is full.

- e. Press the soft key under **ENTER** to store a new number, or press **DOWN ARROW** repeatedly until you see the previously stored entry you would like to change, and then press **CHANGE**.
- f. Dial desired telephone number.
- g. Press the soft key under **NEXT**. The display will show the currently stored name, or indicate "*No Name.*"
- h. Press the soft key under **ENTER** if you wish to store a new name, and then use the dialpad numbers and the soft keys to enter the name.
- i. Press the soft key under **SAVE**.

3.3 To Store Caller ID Records

- a. Press **MENU**. The display will read "*Phone Setting*"
- b. Press the soft key under **ENTER**
- c. Press **DOWN ARROW** repeatedly until "*Caller ID Store*" appears in the display, and then press the soft key under **ENTER**.
- d. Press the soft key under **CHANGE** if you wish to change the setting for Line 1.
- e. Then press **DOWN ARROW** to view and change the settings for Lines 2-4.

3.4 To Store the Centrex Prefix

The Centrex prefix is the part of the telephone that is NOT DIALED to reach another Centrex number in your system. Storing this prefix allows other Centrex stations to be dialed from the caller list. The Centrex prefix will NOT be shown in the display or dialed when dialing from the caller list.

3.4.1 To Set the Centrex Prefix

- a. Press **MENU**. The display will read "**Phone Setting**"
- b. Press the soft key under **ENTER**
- c. Press **Down Arrow** repeatedly until "**Centrex Prefix**" appears in the display
- d. Press the soft key under **ENTER**. The display will show the currently stored Centrex prefix, or indicate "**XXXXXXX**" if none has been stored.
- e. Press the soft key under **CHANGE**
- f. Enter the desired Centrex prefix, up to seven digits.
- g. Press the soft key under **SAVE**.
- h. Press **MENU** to exit.

4. MISCELLANEOUS SETTINGS

4.1 Time and Date

The following steps should be used to set the clock initially or whenever the clock needs to be adjusted. Please note that Caller ID will set the clock automatically whenever a call is received so there will be no need to set it manually.

- a. Press **MENU**. The display will read "**Phone Setting.**"
- b. Press the **DOWN ARROW** repeatedly until "**Time/Date Set**" appears in the display

- c. Press soft key under **ENTER**. The display will show the currently set time
- d. Press the soft key under **CHANGE**
- e. Enter the time as instructed in the display
- f. Press **DOWN ARROW**
- g. Press soft key under **CHANGE** to choose between AM or PM
- h. Press **DOWN ARROW**. The display will show the currently set date.
- i. Press the soft key under **CHANGE**
- j. Enter the date as instructed in the display.
- k. Press **MENU** to exit.

4.2 Message Waiting Lamp

The MSG lamp on the 2750 will flash when a voice mail signal is received. This feature requires either voicemail from the telephone company or a voicemail signal from a PBX.

4.2.1 Message Waiting Line Selection

The 2750 will only respond to messages on one line. By default, this is set to Line 1. Follow the instructions below to change this setting.

- a. Press **MENU**
- b. Press the soft key under **ENTER**
- c. Press **DOWN ARROW** repeatedly until “Telco VMWI” appears in the display.
- d. Press the soft key under **ENTER**. The display will read “**VMWI: LINE 1.**”
- e. Press **CHANGE** repeatedly to select LINE 2, LINE 3, LINE 4, or OFF

4.2.2 Message Waiting Mode Selection

The 2750 can respond to either FSK or Stutter Dial Tone (SDT) message waiting signaling. To change the mode, follow the steps below.

- a. Press **DOWN ARROW**. The display will read “**VMWI: FSK.**”
- b. Press the soft key under **CHANGE** to select **SDT**. This will activate the stutter dial tone detector.
- c. Press **MENU** to exit

4.3 Caller ID on Call Waiting (CIDCW) Sensitivity

If the 2750 does not respond correctly to CIDCW signals, it may be necessary to adjust the sensitivity. This adjustment is not normally needed since the 2750 default CIDCW sensitivity is correct for most applications.

- a. Press **MENU**,
- b. Press the soft key under **ENTER**
- c. Press **DOWN ARROW** repeatedly. “CIDCW: High Sens” or “CIDCW: Low Sens” appears in the display
- d. Press the soft key under **CHANGE** to change sensitivity
- e. Press **MENU** to exit.

4.4 Hold Call Reminder

This feature will prevent calls from remaining on hold for a long time. By default, the 2750 will sound an alert tone after a call remains on hold for 2 minutes. It will then sound an alert every 2 minutes thereafter while the call remains on hold. This default reminder time can be changed to 30 seconds or 1 minute or the feature may be disabled.

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the soft key under **ENTER**
- c. Press **Down Arrow** repeatedly until “**Hold Remind:**” appears in the display
- d. Press the soft key under **CHANGE** repeatedly until the desired held call reminder time is displayed.
- e. Press **MENU** to exit.

4.5 Adjusting Auto Hold Drop Time

To prevent calls from remaining on hold indefinitely, the 2750 will automatically drop a call if it is on hold for more than 30 minutes. This time can be adjusted to 5 minutes or 15 minutes.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display
- c. Press the soft key under **ENTER**
- d. Press **DOWN ARROW** repeatedly until “**Hold Drop**” appears in the display
- e. Press the soft key under **ENTER**. The display will show the currently set hold drop time.
- f. Press the soft key under **CHANGE** repeatedly, until the desired hold drop time is displayed.
- g. Press **MENU** to exit.

4.6 Adjusting Flash Timer

The standard 2750 flash time is 600 milliseconds. This is the correct time for most installations especially in North America. This time can be changed to 100 milliseconds, 300 milliseconds, or 1 second.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display
- c. Press the soft key under **ENTER**.
- d. Press **DOWN ARROW** repeatedly until “**Flash Time**” appears in the display
- e. Press the soft key under **ENTER**.
- f. Press the soft key under **CHANGE** repeatedly, until the desired flash length is displayed.
- g. Press **MENU** to exit.

4.7 Erase Numbers Stored in Memory

To erase all memory dial numbers and personal directory numbers stored in your telephone.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display
- c. Press the soft key under **ENTER**. “**Erase Memory**” will appear in the display.

- d. Press the soft key under **ENTER**. “**Memory Dials**” will appear in the display.
- e. Press the soft key under **ERASE**. After a brief pause, the display will read “**Erasing Done!**”

4.8 Erase Toll Restrictions

At station #01

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display
- c. Press the soft key under **ENTER**. “**Erase Memory**” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “**Erase Toll Restr**” appears in the display.
- e. Press the soft key under **ENTER**
- f. Press the soft key under **ERASE**. After a brief pause, the display will read “**Erasing Done!**”

4.9 Erase All Feature Settings

To erase all the feature settings stored at a particular station and return that telephone to its original factory settings. This will not erase any numbers from the directory or the memory dial.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Advanced Setting**” appears in the display
- c. Press the soft key under **ENTER**. “**Erase Memory**” will appear in the display.
- d. Press **DOWN ARROW** until “**Erase Settings**” appears in the display.
- e. Press the soft key under **ENTER**
- f. Press the soft key under **ERASE**. After a brief pause, the display will read “**Erasing Done!**”

4.10 Reset Default Settings

To reset the 2750 to factory default settings press **MENU, MUTE, MUTE, 2, 7, 4, 1**.

5. ANSWERING SYSTEM


5.1 Setting Answering Option

The 2750 can function as an Answering Machine or as an Auto-Attendant. The answering system can store approximately 60 minutes of incoming messages, memos and outgoing messages (OGMs). If the answering system is full and cannot store any more messages, the display will show the message “Memory Full!” There are only two steps to set up your answering machine. First, turn on the answering system and second, record your OGM.

5.1.1 Turn on Answering Machine

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “**Answer Setting**” appears in the display.

- c. Press the soft key under **ENTER**. “*Ans System: OFF*” will appear in the display.
 - d. Press the soft key under **CHANGE** “*Ans System: ON*” will appear in display.
 - e. Press **MENU** to exit
- The LCD display will show a handset in the upper left corner to indicate that the Answering Machine is turned on.

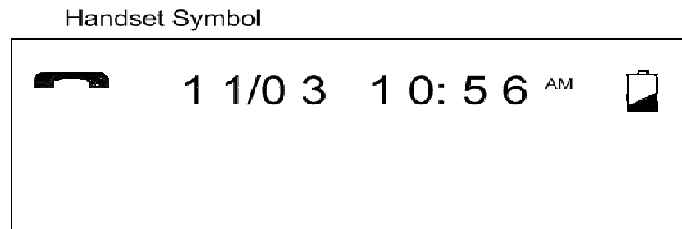

The Answering Machine is Turned ON

5.1.2 Record your OGM

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*OGM Setup*” appears in display.
- e. Press the soft key under **ENTER**. “*Ans OGM*” will appear in display.
- f. Lift handset and press **RECORD** button to start recording. The display will read “*Confirm*” with options of **NO** (Down Arrow) or **YES** (Select Key).
- g. Press Yes.
- h. The unit will play a message of “*Please record a greeting after the tone.*”
- i. Speak your greeting into the handset.
- j. Press **STOP** button to end recording of greeting.
- k. Press **MENU** to exit.

5.1.2.1 Reviewing your OGM.

To review your OGM, follow steps a. through e. of **5.1.2** and then press **PLAY**.

5.1.2.2 Erasing your OGM.

To erase your OGM, follow steps a. through e. of **5.1.2**. Press **RECORD** and then immediately press **STOP**. This will load the factory default greeting.

5.1.2.3 Changing your OGM.

Follow the steps in **5.1.2.** and the newly recorded OGM will automatically replace the old one.

5.1.3 Setting Your Telephone's Pickup Delay

The Pickup Delay setting determines how long the phone will ring before picking up an incoming call. NOTE: Turning Toll Saver ON at this phone will override the Pickup Delay setting for incoming calls, however when a call is transferred from another extension in the system, it will follow the Pickup Delay setting.

To set the Pickup Delay

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Pickup Delay*” appears in LCD Display.
- e. Press the soft key under **CHANGE** repeatedly for the setting you desire (1 to 7 rings)
- f. Press **MENU** to exit.

5.1.4 Setting Toll Saver

The Toll Saver feature helps eliminate toll charges when calling in to check for messages. When Toll Saver is turned ON, the answering system will pick up incoming calls after the second ring if there are new messages, or after the fourth ring if there are no new messages. To avoid toll charges, hang up after the third ring.

Note: The Toll Saver feature overrides the Answer Pickup Delay setting. Also, if this phone is set as an Auto Attendant, the Toll Saver overrides the Auto Attendant Pickup Delay setting. If Auto Attendant Pickup Delay is set to 0 rings, Toll Saver must be OFF.

To Set the Toll Saver Feature ON or OFF follow the directions below.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Toll Saver: OFF*” appears in LCD Display.
- e. Press the soft key under **CHANGE** to turn ON or OFF
- f. Press **MENU** to exit

5.1.5 New Message Beep

The 2750 may be set to beep once every 60 seconds when there are new messages in its answering system. To set the New Message Beep follow the directions below.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*New Msg Beep: OFF*” appears in LCD Display.
- e. Press the soft key under **CHANGE** to turn ON or OFF
- f. Press **MENU** to exit

5.1.6 Remote Code

The Remote Code allows the Answering System to be checked from a distant location. The Remote Code is set to 1234 at the factory. Follow the instructions below to change the Remote Code. If you ever forget your code, simply set a new one at your telephone.

5.1.6.1 Setting the remote code

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Remote Code:******” appears in LCD Display.
- e. Press the soft key under **CHANGE** if you wish to change the Remote Code of this telephone, and then enter a 4 digit number
- f. Press **MENU** to exit

5.1.6.2 Checking Messages Remotely

- a. Dial the 2750 from a remote location.
- b. When the OGM begins playing, enter the Remote Code.
- c. Enter the desired remote commands. (See 5.3.15)
- d. Hang up when finished.

5.1.7 Setting Message Length

The 2750 has only 60 minutes of recording time available for recording the outgoing and incoming messages. It is important to control the message length. There are three settings for this option.

UNLIMITED(default) - Callers can record a message of any length, up to the available memory in your phone.

1 MINUTE - Callers can only record a message up to 1 minute long.

ANNC ONLY - callers will hear the OGM, but will not be able to record a message.

To program the message length follow the steps below.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**
- d. Press **DOWN ARROW** repeatedly until “*Message Length*” appears in the display.
- e. Press the soft key under **ENTER**
- f. Press the soft key under **CHANGE** to set message length
- e. Press **MENU** to exit.

5.2 Auto-Attendant

The 2750 may be set as an Auto Attendant. A 2750 set as an Auto Attendant will answer incoming calls and transfer them to other extensions in the system. Each Auto Attendant can only answer one line at a time, so busy offices may require more than one Auto Attendant.


To use the 2750 as an Auto-Attendant perform the following steps.

1. Set the phone's answering system to “AA”
2. Record the Auto Attendant Day OGM, Night OGM, and Zero-Out OGM.
3. Set the night timer, which will determine the hours that callers will hear the Night OGM.
4. Choose how many times you want the Auto Attendant to ring before picking up calls.

5.2.1 Set up the Auto Attendant

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: OFF*” will appear in the display.
- d. Press the soft key under **CHANGE** repeatedly until “*Ans System: AA*” appears in display
- e. Press **MENU** to exit

When the Auto Attendant is turned on, a symbol of a handset will appear in the upper left corner of the display. The numbers of the lines that it is answering will appear below it.

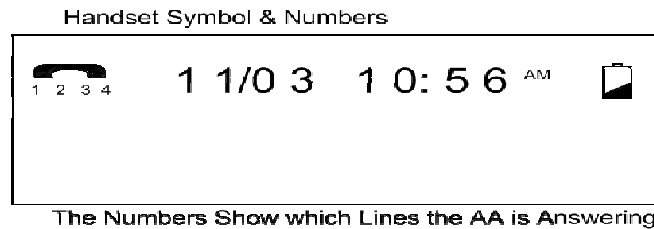

5.2.2 Record the Auto Attendant Day OGM

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*OGM Setup*” appears in display.
- e. Press the soft key under **ENTER**. “*Ans OGM*” will appear in display.
- f. Press **DOWN ARROW** until “*AA Day OGM*” appears in display.
- g. Lift handset and press **RECORD** button to start recording. The display will read “**Confirm**” with options of **NO** (Down Arrow) or **YES** (Select Key).
- h. Press Yes. The unit will play a message of “*Please record a greeting after the tone.*”
- i. Press **STOP** to end recording.
- j. Press **MENU** to exit.

5.2.3 Record the Auto Attendant Night OGM

This is the message callers hear during the night time hours

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*OGM Setup*” appears in display.
- e. Press the soft key under **ENTER**. “*Ans OGM*” will appear in display.
- f. Press **DOWN ARROW** until “*AA Night OGM*” appears in display.
- g. Lift handset and press **RECORD** button to start recording. The display will read “**Confirm**” with options of **NO** (Down Arrow) or **YES** (Select Key).
- h. Press Yes. The unit will play a message of “*Please record a greeting after the tone.*”
- i. Press **STOP** to end recording.
- j. Press **MENU** to exit.

5.2.4 Record the Auto Attendant Zero-Out OGM

This is the message callers hear if they press “0” while listening to the Auto Attendant Message.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*OGM Setup*” appears in display.
- e. Press the soft key under **ENTER**. “*Ans OGM*” will appear in display.
- f. Press **DOWN ARROW** until “*AA Zero-Out OGM*” appears in display.
- g. Lift handset and press **RECORD** button to start recording. The display will read “**Confirm**” with options of **NO** (Down Arrow) or **YES** (Select Key).
- h. Press Yes. The unit will play a message of “*Please record a greeting after the tone.*”
- i. Press **STOP** to end recording.
- j. Press **MENU** to exit.

5.2.5 Setting Auto Attendant Pickup Delay

This setting determines how long the Auto attendant will ring before picking up incoming calls. The number may be between 0 and 8 rings. If 0 is chosen, incoming calls will not ring until after processing by the Auto Attendant.

Note: If the Auto Attendant Pickup Delay is set to “0,” Toll Saver must be set to OFF.

To Set Auto Attendant Pickup Delay

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**
- d. Press **DOWN ARROW** repeatedly until “*AA Delay*” appears in the display.
- e. Press the soft key under **CHANGE** to set delay time
- f. Press **MENU** to exit.

5.2.6 Night Timer Set

The Night Timer determines when the AA Night OGM will play. The default settings start at 5:00PM and end at 9:00AM. To change these timer settings

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**
- d. Press **DOWN ARROW** repeatedly until “*Night Timer Set*” appears in the display.
- e. Press the soft key under **ENTER**, “*Start (XX:XX) PM*” will appear in the display
- f. Press the soft key under **CHANGE** and use key pad to input time, use soft key to set AM/PM
- g. Press **DOWN ARROW**, display will show “*End (XX:XX) AM*”
- h. Press the soft key under **CHANGE** and use key pad to input time, use soft key to set AM/PM
- i. Press **MENU** to exit.

5.2.7 Setting More Than One Phone as an Auto Attendant

More than one phone may be set as an Auto Attendant to act as a back up when the primary Auto Attendant is busy. The primary Auto Attendant should be set with the shortest Auto Attendant Pickup Delay so that it will always answer first. Each subsequent Auto Attendant must have a different pickup delay so that multiple units will not try to pickup a call at the same time.

5.2.8 Using Additional Auto Attendant OGMs

In addition to the AA Day OGM, an additional 7 Auto Attendant OGMs numbered AA OGM2 through AA OGM8 may be recorded. The caller hears any of these messages by dialing the corresponding number.

To record additional Auto Attendant OGM

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Advanced Setting*” appears in display.
- e. Press the soft key under **ENTER**. “*AA OGM 2-8*” will appear in display.
- f. Press the soft key under **ENTER**. “*AA OGM2*” will appear in display
- g. Lift handset and press **RECORD** button to start recording. The display will read “**Confirm**” with options of **NO** (Down Arrow) or **YES** (Select Key).
- h. Press Yes. The unit will play a message of “*Please record a greeting after the tone.*”
- i. Press **STOP** to end recording.
- j. Press **MENU** to exit.

5.2.9 Setting Separate Auto Attendant OGM's for Different Lines.

The 2750 is preset to play the AA Day OGM on all lines, but it is possible to have a different Auto Attendant OGM for one or more lines. In order to use this feature, first follow the instructions above to record additional Auto Attendant OGMs. Then follow the steps below to assign the desired Auto Attendant OGM to each line.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Advanced Setting*” appears in display.
- e. Press the soft key under **ENTER**.
- f. Press **DOWN ARROW** until “*AA by Line*” appears in display.
- g. Press the soft key under **ENTER** “*LI AA OGMI*” will be on display
- h. Press the soft key under **CHANGE** until the OGM is the one to be answered on Line 1
- i. Press **DOWN ARROW** to go to next Line or **MENU** to exit.

5.2.10 Turn Off the Auto Attendant on One or More Lines

It is possible to disable the Auto Attendant on one or more lines. To do this follow the steps of 5.2.9 and keep pressing the Change Button until the OGM is OFF.

5.2.11 Choosing the Zero-Out Action

When the caller dials “0” during an Auto Attendant message, the default setting is that it plays the Zero-Out OGM. However, it is possible to choose a different Zero-Out action. The 2750 may be set to transfer to a particular extension, ring all the phones with a particular distinctive ring, or even disallow the caller to zero-out. To choose a Zero-Out action.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Advanced Setting*” appears in display.
- e. Press the soft key under **ENTER**.
- f. Press **DOWN ARROW** until “*Zero Out Action*” appears in display.
- g. Press the soft key under **ENTER**, “*AA ZERO-OUT OGM*” will appears in the display
- h. Press the soft key under **CHANGE** until the desired Zero-Out Action is displayed.
- i. Press **MENU** to exit.

5.2.12 All Transfer Feature

The 2750 can transfer calls to all phones with one of nine personal rings. After hearing an Auto Attendant OGM, if the caller dials 30 through 38, then all phones will ring with that particular distinctive ring.

5.2.13 Leave a Message at the Auto Attendant

The AA Messages do not have any beep at the end, and will not normally record any message. However, if the caller presses # while listening to an AA OGM, the phone will play its ANS OGM and allow the caller to leave a message.

5.2.14 Set Night Message by Line

The night message may be disabled on any or all lines, so that the day message will play at all hours. To program the feature follow the steps below.

- a. Press **MENU**
- b. Press **DOWN ARROW** repeatedly until “*Answer Setting*” appears in the display.
- c. Press the soft key under **ENTER**. “*Ans System: ON*” will appear in the display.
- d. Press **DOWN ARROW** repeatedly until “*Advanced Setting*” appears in display.
- e. Press the soft key under **ENTER**.
- f. Press **DOWN ARROW** until “*Night Msg by Ln*” appears in display.
- g. Press the soft key under **ENTER**, “*L1 NIGHT MSG:ON*” will appears in the display
- h. Press **DOWN ARROW** until the desired Line is displayed.
- i. Press the soft key under **CHANGE** to either turn OFF or ON.
- j. Press **MENU** to exit.

5.2.15 Transfer Directly to Voice Mail

While listening to the Auto Attendant OGM, the caller may dial “8” followed by the desired extension number to transfer directly into that extension's voice mail. This presumes that the extension is a 2750 with the Answering System turned on.

5.2.16 Repeating the Main Menu and Messages

While listening to an Auto Attendant OGM, the caller may dial “9” to repeat the main menu. AA OGM 2 – 8 messages can be repeated by dialing the number of the message.

5.2.17 Summary of Auto Attendant Actions

The following table summarizes the possible digits the caller might press during an Auto Attendant message, along with the associated Auto Attendant response.

Caller Dials	Auto Attendant Response	Notes
01 through 16	The AA will transfer the call to the corresponding extension	
0	The AA will play the Zero-Out OGM, or perform whatever Zero-Out Action has been programmed	
30 through 38	The AA will ring all the other extensions with the corresponding distinctive ring	
#	The AA will play its Ans OGM, then allow the caller to leave a message at the Auto Attendant	
8 followed by 01-16	The AA will transfer the call directly into the Voice Mail without first ringing the extension	Requires that the extension be a 2750 unit to record message.
1 through 8	The AA will play the Corresponding AA OGM	Also used to replay OGM
9	The AA will repeat the main Menu	


5.3 Voicemail

The 2750 supports two types of Voice Mail/Voice Answering - external Voice Mail service from the telephone company and the internal Answering System. See Section 4.2 for external Voice Mail. This section deals with the internal Voice Mail system. This system allows up to 60 minutes of incoming and out going messages.

5.3.1 Activation

When the Voice Mail system is on, a symbol of a handset will appear in the display.

Handset Symbol

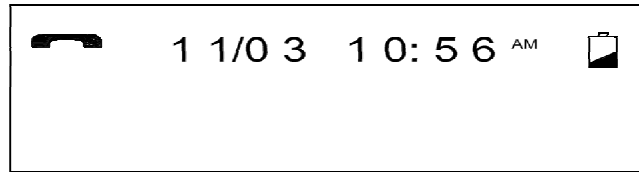

The Answering Machine is Turned ON


5.3.2 Message Notification

When a message is received, the large red LED above the display will light and the handset symbol will flash in the display.

5.3.3 Play Messages

Press **PLAY/PAUSE**. The display will indicate how many new and how many saved messages are currently stored in the answering system. The voice will announce “*You have XX new messages and XX saved messages. First new message ...*” This will be followed by date and time the message was received and the message itself. The voice will then announce “next new message.” This will continue until all the new messages are played, then it will automatically continue with the saved messages.

Display after pressing PLAY/PAUSE BUTTON to Listen to Messages

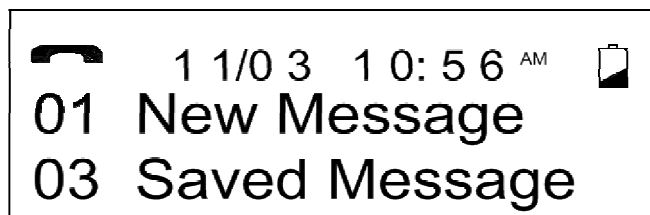

5.3.4 Stop Message Playback

Press **STOP** at any time to stop message playback.

5.3.5 Pause Message Playback

Press **PLAY/PAUSE** to pause message playback. The display will read “**Pause**”. Press **PLAY/PAUSE** again to resume playback.

5.3.6 Repeat a Message

During message playback, press **REPEAT** to return to the beginning of the current message. To go to the beginning of the previous message, press **REPEAT** twice.

5.3.7 Skip to the next Message

During message playback, press **SKIP** to skip to the next message.

5.3.8 Jump Backward

During message playback, press **BACK** to move back 2 seconds in the current message.

5.3.9 Jump Forward

During message playback, press **FORWARD** to move forward 2 seconds in the current message. Press **FORWARD** twice to move to the next message.

5.3.10 Saving a Message as New

During message playback, press **SAVE AS NEW** to save the current message as new. This message will then be grouped with the new messages, as if it had not yet been played, and the Answering System Indicator will continue to flash, showing that there is at least one new message.

5.3.11 Message Auto Save

If **SAVE AS NEW** is not pressed, the message will still be saved, but it will be grouped with the saved messages. The answering system will save all messages until they are erased. When enough messages are saved to fill the phone memory, no new messages can be recorded. Messages must be erased to make space for new messages.

5.3.12 Increase Playback Speed

During message playback, press “6” on Dial Pad to increase the playback speed.

5.3.13 Decrease Playback Speed

During message playback, press “4” on Dial Pad to decrease the playback speed.

5.3.14 Erasing Messages

5.3.14.1 Erase a Single Message

While listening to the message, press the **ERASE** button. The voice will say “*Erased*” as a confirmation.

5.3.14.2 Erase All Messages

During message playback, press the **ERASE** button and keep it depressed for 5 seconds, until the voice says “*All Messages Erased*”.

5.3.15 Using Dial Pad

During message playback, the dial pad can also be used to navigate the messages. A list of commands is given below

Key	Command	Key	Command
1	Move 2 Seconds Backward	6	Increase Playback Speed
2	Play	7	Repeat
3	Move 2 Seconds Forward	9	Skip
4	Decrease Playback Speed	*	Save as New
5	Stop	#	Erase

5.3.16 Recording a Memo or Conversation.

The 2750 allows the voice mail memory to be used to record a memo or a conversation.

Note: The 2750 does not sound any warning beeps to alert the other party that the conversation is being recording. To comply with laws or regulations concerning telephone call recording, the other party should be informed of the recording.

5.3.16.1 Recording a Memo

While the telephone is idle, a memo can be recorded. This will be saved along with the new messages for later playback. To record a memo, press **RECORD**. The button will light, and the LCD will display “**Recording**”. Speak into the speaker phone or lift the handset and speak into it. When finished with the recording, press **STOP**.

5.3.16.2 Recording a Telephone Conversation.

Both sides of a phone conversation may be recorded. The recording will be saved along with the new messages for later playback. To record a conversation, press **RECORD**. The button will light, and the LCD will display “**Recording**”. When finished with the recording, press **STOP**. Remember to notify the other party that the conversation is being recorded.

5.3.17 Screening Calls

The Call Screening Feature allows messages to play over the speakerphone as they are being recorded. To take the call, press the corresponding **LINE** button. Press **SCREEN** to turn on the Call Screening feature. When the feature is active, the **SCREEN** button will be lighted. Press **SCREEN** again to turn off screening.

6. TELEPHONE OPERATION

6.1 Making and Answering Calls

When the handset is lifted, the 2750 will automatically select a line based on the automatic line selection setting as described in Section 2.7. The 2750 will automatically select a ringing line if the handset is lifted during ringing.

To use the speakerphone to make or answer a call or a page, press the **SPEAKER** button instead of lifting the handset. This will select the line in the same manner as the handset described above. To override automatic line selection, press the desired **LINE** button instead of pressing the **SPEAKER** button. The 2750 will then be connected to that line on the speakerphone.

To switch from handset to speaker during a call, press the **SPEAKER** button and hang up the handset. To switch to handset from speakerphone, lift the handset. Note that whenever the **SPEAKER** indicator is on, the handset may be hung up without disconnecting the call.

6.2 Redial

6.2.1 To redial the last phone number dialed

- a. Go off-hook by lifting the handset, pressing **SPEAKER**, pressing **HEADSET**, or by pressing the desired **LINE** button.
- b. Press **REDIAL**.

6.2.2 To redial any of the last five phone numbers dialed

The Redial feature enables viewing or redialing of any of the last five telephone numbers dialed. This also shows the time, date and duration of each call.

- a. With the phone on-hook and idle, press **REDIAL**. The display will show the last number dialed, the time and date of the call, and its duration.
- b. Press the right arrow button under the display repeatedly to scroll through a list of the last five numbers dialed along with the time, date, and duration.
- c. Go off-hook at any time to dial the displayed number.

6.3 Hold

6.3.1 Placing a Call on Hold

To place an outside call on Hold, press **HOLD**. To take the call off hold, press the line button of the line on hold. While a caller is on hold, the handset can be hung up without disconnecting the call. When a call is on hold, it can be removed from hold by any telephone connected to that line simply by accessing the line. If a call remains on hold after 2 minutes, your 2750 will alert you. See Section 4.4.
Note: Intercom calls cannot be put on hold.

6.3.2 Making a call on another line

To make a call on a second line while having a conversation, press **HOLD** to place your first call on hold and then press another **LINE** button. A call may now be made on the second line. Press the first **LINE** button to return to the first call. This will disconnect the second call. To keep the second call, it must be placed on hold before returning to the first call. This can be done multiple times during a call.

6.3.3 Answering a call on another line

If there is an active call on one line and a call comes in on another line, the incoming line lamp will flash and the 2750 will sound a double ring every 15 seconds. If the incoming line is set to ringer off, the double ring will not sound.

The incoming call may be answered by pressing the flashing **LINE** button. This will disconnect the original call unless it is placed on hold.

6.4 Conference

The 2750 allows conference calls with two other parties. These may be either two outside lines or one outside line and one intercom station.

6.4.1 Outside Calls

- a. Make or answer a call.
- b. Press **HOLD**.
- c. Make or answer a call on another line.
- d. When the second call is connected, press the **CONFERENCE** button. The lines are immediately conferenced.
- f. Hang up to end the conference call. To disconnect one of the conference parties, press the **LINE** button for the other party.

6.4.2 Outside Call with Intercom Station

- a. Place an intercom call to the desired station. The outside call is automatically placed on hold.
- b. After the person at the other station answers, press the **CONFERENCE** button to create a conference call.
- c. Hang up to end the conference call. The person at the other station may remain connected to the outside call.

If System Call Privacy is OFF, another intercom station may join a call by pressing the appropriate **LINE** button.

Pressing **HOLD** during a conference call will place both lines on hold. The conference call can be reestablished by first pressing one of the **LINE** buttons and then pressing **CONFERENCE**.

6.5 Transfer

6.5.1 Attended Transfer

- a. Place an intercom call to the desired station. The outside call is automatically placed on hold.
- b. When the intercom party answers announce that a call is being transferred.
- c. Press the **TRANSFER** button to complete the transfer. Press the **LINE** button to return to the outside call and abort the transfer.

6.5.2 Blind Transfer

- a. Press the **TRANSFER** button.
- b. Dial the desired two-digit station number to transfer the call to that station. If the desired station does not answer, it will stop ringing after one minute.

To re-engage the call press the flashing **LINE** button. The call can be answered at any telephone by pressing the flashing **LINE** button.

6.5.3 Transfer Ring

A call may be transferred to all stations by using the transfer ring. To use this feature, press **TRANSFER** twice after answering a call. All of the other phones will ring in the transfer ring and the call will be transferred to the next answering station. The call will remain on hold at the transferring station until it is retrieved at another.

6.5.4 Personal Ring

The **2750** telephone also features eight unique personal transfer rings. These may be assigned to individual users. Calls can then be transferred to them using this ring. To use this feature, press **TRANSFER** and then the desired dial pad number buttons. All the other phones will now ring with the personal ring represented by that number.

6.6 Caller ID

The Caller ID feature works in conjunction with Caller ID service offered by your local telephone company. The 2750 will store the last 50 calls received. This feature requires a subscription to Caller ID service from the telephone company. This service must be ordered separately for each line. Also note that call waiting caller ID may not be available in all areas.

6.6.1 Incoming call

The caller ID information will be displayed automatically.


6.6.2 Call Waiting Caller ID

If a call comes in during an active call, the display will show the caller ID information. To answer that call, press **FLASH**. To return to the previous call, press **FLASH** again.


6.6.3 Caller List

6.6.3.1 Reviewing Calls

To review previous calls, press **CALLS** and use the up and down arrow buttons under the display to scroll through the caller list. The display will indicate the number of new calls in the caller list, as well as the total number of calls in the caller list. A “new” call is one that has not yet been viewed.

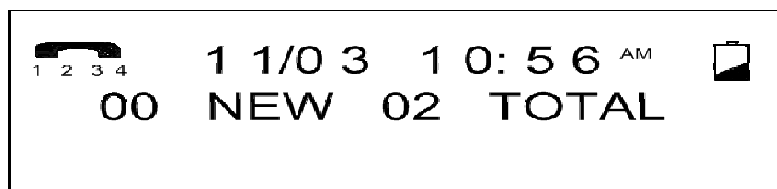

The call record will show the Caller Name, Call Number, Line Number, Date, and Time of call.

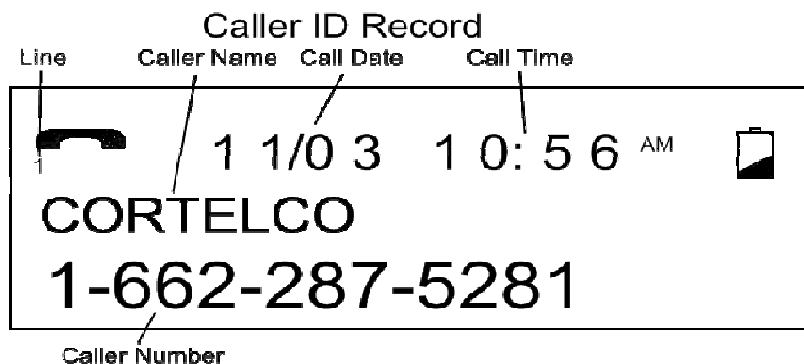

6.6.3.2 Dialing Calls

Press **CALLS** and use the up or down arrow buttons to display the desired number. Then lift the handset, press **SPEAKER**, **HEADSET**, or a **LINE** button to dial the number. If the number is not displayed in the correct format, press **SELECT** repeatedly to scroll through different dialing formats.

6.6.3.3 Deleting Numbers

To delete a single number, press **DELETE** twice when the desired number is displayed. To delete all the numbers in the caller list press **DELETE** for 5 seconds while reviewing the caller list.

Note: The Caller List feature may be disabled. See Section 3.4.

6.7 Volume Levels

The Ringer, Handset, Speakerphone, Intercom Speaker and Discrete Alert Volumes can all be set independently by using the **VOLUME** buttons. Eight ringer, four handset, eight speakerphone, eight intercom speaker, and eight discrete alert volumes are available.

To increase the volume, press the **UP** button.

To decrease the volume, press the **DOWN** button.

6.7.1 Ringer

While the phone is on-hook and idle, press the up and down **VOLUME** buttons to set desired ringer volume. With each press, the phone will ring once at the new volume.

6.7.2 Handset

While using the handset, press the up and down **VOLUME** buttons to set desired handset volume.

6.7.3 Speakerphone

While the speakerphone is activated, press the up and down **VOLUME** buttons to set desired speakerphone volume.

6.7.4 Intercom Speaker

While using the intercom or receiving a page, press the up and down **VOLUME** buttons to set desired intercom speaker volume.

The speaker volume levels for the intercom and for outside calls are independent of each other.

6.7.5 Discrete alert

While the phone is on-hook and idle, press **HOLD**. Then press the up and down arrows of the **VOLUME** button to set desired discrete alert volume. With each press, the phone will ring once at the new discrete alert volume. The discrete alert volume setting governs the volume of off-hook ringing, off-hook intercom ringing, held call reminder, and line reserve alert.

6.8 Voice Mail (Message Waiting)

The 2750 supports external Voice Mail indicators. This requires a service subscription. When using external VM, the LCD will display a message to alert you that there is a message and its line. Each

2750 can receive messages on only one line. To retrieve messages from multiple mail boxes, multiple phones must be used. See Section 4.2.1 to select the message waiting line. The telephone company will supply either FSK or Stutter Dial tone. The 2750 is set to FSK by default. See Section 4.2.2 to change the message waiting type.

6.8.1 Accessing Messages

To retrieve a message, dial the number for the voice mail service and follow the instructions from your voicemail provider.

6.8.2 Resetting MSG Lamp

Sometimes the MW lamp will continue to flash even though all messages have been retrieved. In this case, follow the instructions below to reset the lamp.

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the **DOWN ARROW** until “**Message Lamp**” appears in the display.
- c. Press the soft key under **RESET**.

6.9 FLASH

Press **FLASH** to access services such as Call Waiting or 3-Way Calling, or to activate certain PBX or Centrex features. Refer to the custom calling instructions provided by the telephone company or to the PBX operating instructions. See Section 4.6 to change the flash time if necessary.

6.10 Mute

The Mute feature disables the telephone microphone so the 2750 user cannot be heard by the distant party. The Mute feature works with both the handset and the speakerphone. It silences only the 2750 user. The distant party can still be heard. Mute is cancelled by hanging up, selecting another line or switching from speakerphone to handset during a call.

To activate this feature, press **MUTE**. The **MUTE** indicator will light. Press **MUTE** again to cancel the feature. The **MUTE** indicator will turn off.

6.11 Do Not Disturb (DND)

While the DND feature is activated, the 2750 will not ring. Incoming calls will be signaled only by the **LINE** indicators flashing.

If DND is activated, pages will not be heard, intercom calls cannot be received, and calls cannot be transferred to the telephone. Outside calls may be answered by pressing the flashing **LINE** button. Outside calls and intercom calls may still be placed.

To activate DND

- a. Press **MENU**. The display will read “**Phone Setting**”
- b. Press the soft key under **ENTER** until “**Do not Disturb:N**” appears in the display.
- c. Press the soft key under **CHANGE**. The display will now read “**Do not Disturb:Y**”.
- d. Press **MENU** to exit.

The DND indicator in the display will now be on, and the display will read “Do Not Disturb.” To cancel DND press the soft key under **RESET**

6.12 Line Reserve

The Line Reserve feature enables the line currently in use to be reserved. When that line becomes free, the 2750 phone will sound a triple ring and that line will be reserved. Line reserve will be cancelled if the line is not taken off hook within 15 seconds. It may also be cancelled by making or receiving a call on another line or by pressing the reserved line button.

To reserve a line

- a. Press **HOLD**.
- b. Press the desired **LINE** button. The line indicator will turn from red to orange.

6.13 Call Privacy

See Section 2.8 for a description of Call Privacy and for initial programming instructions. To release call privacy during a single call press **CONFERENCE**. “Privacy Released” will appear in the display. Call privacy will be reactivated for the next call.

6.14 Toll Restriction

See Section 2.7 for a description of Toll Restriction and initial programming instructions.

6.14.1 Toll Restriction Removal (Single Call)

- a. Press **HOLD**.
- b. Enter the 4 digit toll restriction access code which was set at Station #01. If no code was set, the access code is “1234”.
- c. The **SPEAKER** light will flash indicating that toll restriction is temporarily off. Toll Restriction will be reactivated 10 seconds the end of the call. This will be signaled by a flash of the **SPEAKER** light. Unrestricted calls may continue to be made by going off hook within 10 seconds of hanging up then previous call.

6.14.2 Toll Restriction Removal (Single Station)

Toll Restriction may be changed at a telephone without affecting the Toll Restriction settings stored in that telephone. When Toll Restriction is disabled at a telephone using this feature, it will stay off until it is reactivated. To access this feature:

- a. Press **HOLD**.
- b. Enter “*” to activate Toll Restriction or “#” to deactivate Toll Restriction.
- c. Enter the 4 digit toll restriction access code which was set at Station #01. If no code was set, the access code is “1234”.

Note: Turning Toll Restriction ON at a telephone will have no effect unless restrictions have been stored at that telephone.

6.15 Timer

6.15.1 Elapsed Call Time

The display automatically shows the elapsed time during a call.

6.15.2 Timer Reset

Press the up arrow (^) button, which is found directly below the display.

6.15.3 Elapsed Call Time (Previous Calls)

While the phone is on-hook and idle, press **REDIAL**. The display will show the elapsed time of the previous call, along with its time and date. Use the right arrow button under the display to view the lengths of the previous five calls, along with their times and dates.

6.16 Headset

The 2750 is equipped with a 2.5mm headset jack, and a built-in headset amplifier, along with a dedicated **HEADSET** button. To use this feature, plug a telephone headset with a 2.5 millimeter plug into the headset jack. There is no need to buy a headset with a separate amplifier. The headset can be used to make or answer an outside call, an intercom call or a page. Simply press **HEADSET** instead of lifting the handset.

To make a headset call on a particular line, press the desired **LINE** button to connect to that line on the speakerphone. Then press **HEADSET** to toggle to the headset. Press **HEADSET** again to hang up.

6.17 Directory Card

This card can be used to record the names or telephone numbers associated with memory locations.

6.18 Personal Directory

- a. While the phone is on-hook and idle, press the “#” button. The display will read “**Directory.**”
- b. Use the up and down arrow buttons below the display to view the personal directory entries.
- c. When the desired entry is displayed, it may be dialed by lifting the handset, pressing **SPEAKER** or **HEADSET**, or by pressing a **LINE** button.

Note: The directory is organized alphabetically. To jump to a particular entry, press the corresponding dial pad number. For example, press the “5” dial pad button three times to jump to the first entry starting with “L”. You can then use the up and down arrow buttons to view the entries starting at that point.

6.19 Predialing

Predialing allows the entry of a telephone number on the display before it is dialed out. To make a predial call, enter the number using the dialpad while the telephone is on-hook. Then lift the handset, press **SPEAKER** or **HEADSET** or press the desired **LINE** button. Press **DELETE** to erase digits one at a time.

6.20 Intercom Calls

Intercom calls may be made by dialing the two-digit station number of the desired station. The speaker phone automatically activates when an intercom call is placed. See Section 2.6 for a description of intercom call responses. If the intercom line is busy or the called station is set to DO NOT DISTURB, you will hear a no action tone.

6.20.1 Intercom while Idle

- a. Press **INTCM**.
- b. Dial the two-digit station number of the station to receive the call.
- c. To end the conversation, hang up or press **SPEAKER** or **HEADSET** button.

6.20.2 Intercom while on an Outside Call

Press **INTCM**. The outside call is automatically placed on hold.

6.20.3 Answering Intercom Calls

6.20.3.1 Intercom Ring

Press **SPEAKER** or **HEADSET** or lift the handset.

6.20.3.2 Intercom Voice

One ring will sound. Then an alert tone will sound followed by the caller's voice. Press **SPEAKER** or **HEADSET** or lift the handset.

6.20.3.3 Intercom Handsfree

One ring will sound followed by a triple alert tone. The 2750 will then automatically answer the intercom call on speakerphone.

6.20.3.4 Answering an Intercom Call while on an Outside Call

Press **INTCM**. The outside call is automatically placed on hold. Press the **LINE** button to return to the outside call.

6.21 Paging

Paging allows announcements to be made to other stations in the system. The speakerphone is automatically activated when making a page. Pages can be made using the speakerphone or the handset.

Note: Another station may be paged only if it is not in use, does not have DO NOT DISTURB activated, and is not set to Block Pages. If the station is in any of these conditions, a no action tone will be heard.

6.21.1 Single Page

- a. Press **PAGE**.
- b. Dial the two-digit station number of the station to be paged.
- c. After the paging tone sounds, speak towards the telephone or lift the handset and make the announcement.

6.21.2 All Page

The **All Page** feature enables announcements to be made through all of the other stations. When an All Page is made, a double paging alert tone will sound followed by the page. Pages will not be heard at in

use stations or stations set to DO NOT DISTURB or Page Block.

To perform an All Page:

- a. Press **PAGE** twice.
- b. After the paging tone sounds, speak towards the telephone or lift the handset and make the announcement.

6.21.3 Blocking Pages

- a. Press **MENU**. The display will read **Phone Setting**
- b. Press soft key under **ENTER**.
- c. Press the **Down Arrow** repeatedly until **Intercom Prefs** appears in the display.
- d. Press soft key under **ENTER**.
- e. Press **DOWN ARROW** repeatedly until **Pages: Allowed** appears in the display.
- f. Press the soft key under **CHANGE** to select between Pages **ALLOWED** and Pages **BLOCKED**.
- g. Press **MENU** to exit.

6.21.4 Answering Pages

6.21.4.1 Single Page

A page directed to a particular station may be answered only at that station. To answer a page, lift the handset, press **SPEAKER** or **HEADSET**, or press the flashing **INTERCOM** button. This will create a private intercom conversation.

6.21.4.2 All Page

An All Page may be answered from any phone in the system, even one that is busy on an outside line, has DO NOT DISTURB set or has blocked pages. Press the flashing **INTERCOM** button to answer an All Page. This will create a private intercom conversation.

6.22 Room Monitoring

The Room Monitoring feature allows the speakerphone of a 2750 to be activated to monitor sounds in another location.

To activate Room Monitoring, place an intercom call to the monitoring telephone. Press **MUTE** to prevent sounds from being heard at the monitored phone.

To end monitoring, hang up the handset or press **SPEAKER**. The remote station will disconnect immediately.

Note: The remote phone must be set to Intercom HANDSFREE.

7. USING STANDARD TELEPHONES

You may also use standard (non-2750/2740) telephones in conjunction with your 2750 telephones. All features of the non-2750 telephones will operate normally. However, they will not be able to share the features of the 2750 telephones.

7.1 Line Status and Calls on Hold

The line status indicators of the 2750 phones will recognize standard telephones. When a call is placed on hold at a 2750 telephone, it can be taken off hold at a standard telephone.

Note: If the line status indicators of your 2750 telephones do not function properly, follow the instructions for setting the loop voltage detector in Section 2.4.

7.2 Call Privacy

Call privacy is not observed by standard telephones. A standard telephone on any line has access to that line at any time, whether or not it is being used by a 2750 telephone.

7.3 Intercom

Standard telephones cannot use the intercom feature to communicate with 2750 telephones.

7.4 Fax Machines and Modems

You may connect modems or fax machines to any of your lines, and the line indicators of the 2750 telephones will light when these devices are using a line.

8. POWER FAIL OPERATION

If AC power is disconnected or there is a power failure, the telephone automatically switches to battery operation for approximately two hours. When the power is restored, the telephone automatically switches back to AC power and resumes normal operation. If the battery is missing or low on power when AC power is lost, the telephone will not function. However, all feature settings and memory numbers will be maintained.

Note: It is recommended to always have at least one telephone connected that does not require battery power, so that you are always sure to have use of a telephone during a power failure.

APPENDIX A

Menu Tree

TOP LEVEL

PHONE SETTING

ANSWER SETTINGS

MEMORY SETTINGS

TIME/DATE SET

ADVANCED SETTINGS

Phone Settings

MENU OPTION	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
Station #		None	
Do Not Disturb		N	
Ringer Settings	L1 Ringer	ON	On/Delay/Off
	L2 Ringer	ON	On/Delay/Off
	L3 Ringer	ON	On/Delay/Off
	L4 Ringer	ON	On/Delay/Off
Off Hook Ring		Y	Y(Yes)/N(No)
Intercom Prefs	Intcm	Handsfree	Ring/Voice/Handsfree
	Pages	Allow	Allowed/Blocked
Line Type	L2	Common	Common/Private/Unconnected
	L3	Common	Common/Private/Unconnected
	L4	Common	Common/Private/Unconnected
Auto Seize		L1	L1/L2/L3/L4/Intcm
Distinctive Ring	L1 Ring Sound #	1	1,2,3,4,5,6,7,8
	L2 Ring Sound #	1	1,2,3,4,5,6,7,8
	L3 Ring Sound #	1	1,2,3,4,5,6,7,8
	L4 Ring Sound #	1	1,2,3,4,5,6,7,8
Telco VMWI	VWMI Line	Line 1	Line 1, Line 2, Line 3, Line 4, OFF
	VWMI Type	FSK	FSK/Stutter
Area Codes	Home Code	None	Three Digits
	Local Code 1	None	Three Digits
	Local Code 2	None	Three Digits
	Local Code 3	None	Three Digits

MENU OPTION	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
	Local Code 4	None	Three Digits
	Local Code 5	None	Three Digits
	Local Code 6	None	Three Digits
	1 Plus 7 Code 1	None	Three Digits
	1 Plus 7 Code 2	None	Three Digits
	1 Plus 7 Code 3	None	Three Digits
	1 Plus 7 Code 4	None	Three Digits
	1 Plus 7 Code 5	None	Three Digits
	1 Plus 7 Code 6	None	Three Digits
Caller ID Store	L1 CID Store	ON	ON/OFF
	L2 CID Store	ON	ON/OFF
	L3 CID Store	ON	ON/OFF
	L4 CID Store	ON	ON/OFF
Toll Restriction	Set Restriction 1		Enter 1234 to access programming
	Set Restriction 2		
	Set Restriction 3		
	Set Restriction 4		
	Set Restriction 5		
	Set Allowed 1		
	Set Allowed 2		
	Set Allowed 3		
	Set Allowed 4		
	Set Allowed 5		
	Line Restriction L1	Normal	Normal/Restricted
	Line Restriction L2	Normal	Normal/Restricted
	Line Restriction L3	Normal	Normal/Restricted
	Line Restriction L4	Normal	Normal/Restricted
Station Naming			Set at Sta 01 for ea. of 16 Stations
Hold Remind		2min	Off/30s/1min/2min
Centrex Prefix	Prefix		Up to 7 digits
Message Lamp	Reset		
CIDCW		High Sens	High Sens/OFF/Low Sens

Answer Settings

MENU OPTIONS	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
Ans System		OFF	OFF/ON
OGM Setup	Ans OGM		
	AA Day OGM		
	AA Night OGM		
	AA Zero-Out OGM		
Pickup Delay		5	1,2,3,4,5,6,7
AA Delay		2	0,1,2,3,4,5,6,7,8
Toll Saver		OFF	OFF/ON
Message Length		Unlimited	Unlimited/1 MINUTE/ANNC ONLY
Night Timer Set	Start	'05:00 PM	
	End	'09:00 AM	
Remote Code		1234	
New Message Beep		OFF	OFF/ON
Advanced Setting	AA OGM 2		
	AA OGM 3		
	AA OGM 4		
	AA OGM 5		
	AA OGM 6		
	AA OGM 7		
	AA OGM 8		
AA by Line	L1 AA OGM 1		
	L2 AA OGM 1		
	L3 AA OGM 1		
	L4 AA OGM 1		
Ans by Line	L1 Ans ON		ON/OFF
	L2 Ans ON		ON/OFF
	L3 Ans ON		ON/OFF
	L4 Ans ON		ON/OFF
Night Msg by Line	L1 NIGHT MSG: ON		ON/OFF
	L2 NIGHT MSG: ON		ON/OFF
	L3 NIGHT MSG: ON		ON/OFF
	L4 NIGHT MSG: ON		ON/OFF

MENU OPTIONS	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
Zero Out Action		RING STN #01	RING STN 01,02,03,04,05,06,07,08,09,10,11,12,13,14,15,16, GLOBAL RING #30, 31,32,33,34,35,36,37,38, DISALLOW
Centrex Trnf		OFF	OFF/ON

Memory Settings

MENU OPTIONS	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
Select Location			# sign for Personal Directory, 40 memory locations.

Time and Date Settings

MENU OPTIONS	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
TIME			HH:MM
AM/PM			AM/PM
DATE			MM/DD/YY

Advanced Settings

MENU OPTIONS	SUB MENU	DEFAULT	AVAILABLE OPTIONS/COMMENT
Erase Memory			
Erase Settings			
Erase Toll Restr	Enter Code		Station# 02 and above
Erase Ans System			
Version Info			Provides Firmware Info
System Test	Key Test		Checks Feature Keys As Depressed
	LCD Test		Checks LCD
Headset Type		2.5mm JACK	2.5mm JACK/HANDSET JACK
Flash Time		600ms	600ms, 1s, 100ms, 300ms
Hold Drop		30MIN	30MIN, 99MIN, 5 MIN, 15MIN
Hold Release		OFF	OFF/ON
Station#		NORMAL	NORMAL/LOCKED
Loop Detect		48V	48V, 24V, 12V, OFF
Tone/Pulse		TONE	TONE/PULSE
System Privacy		Y(Yes)	YES/NO (only appears at Stn 01)

APPENDIX B

Installation Worksheet

Note: Line 1 must be common to all system sets

Station Number	Station Type	User Name or Telephone Location	Line 1 Tel. # _____	Line 2 Tel. # _____	Line 3 Tel. # _____	Line 4 Tel. # _____
Station 01			Common	Common Private	Common Private	Common Private
Station 02			Common	Common Private	Common Private	Common Private
Station 03			Common	Common Private	Common Private	Common Private
Station 04			Common	Common Private	Common Private	Common Private
Station 05			Common	Common Private	Common Private	Common Private
Station 06			Common	Common Private	Common Private	Common Private
Station 07			Common	Common Private	Common Private	Common Private
Station 08			Common	Common Private	Common Private	Common Private
Station 09			Common	Common Private	Common Private	Common Private
Station 10			Common	Common Private	Common Private	Common Private
Station 11			Common	Common Private	Common Private	Common Private
Station 12			Common	Common Private	Common Private	Common Private
Station 13			Common	Common Private	Common Private	Common Private
Station 14			Common	Common Private	Common Private	Common Private
Station 15			Common	Common Private	Common Private	Common Private
Station 16			Common	Common Private	Common Private	Common Private

Station Type: 2740, 2750, 2742, 2743

APPENDIX C

Toll Restriction Worksheet

Toll restriction numbers are set individually at each station, so the restrictions can vary from phone to phone. Some examples of common restrictions: “1” = to restrict all numbers starting with “1”, “01” = to restrict all international calls. “0” = to restrict all operator-assisted calls. “#662 = to restrict all “0662” and “1662” calls. When you enter restricted numbers, “#” is a wildcard.

Note: Restrictions are usually just a few digits, since they prevent the dialing of all numbers starting with those digits

Use the worksheet below to plan your choice of restricted numbers. Use a different worksheet for each set of restrictions.

	Enter the restricted numbers. Each restriction can be up to 6 digits long					
1 st Restriction						
2 nd Restriction						
3rd Restriction						
4th Restriction						
5 th Restriction						

If you set restrictions at a particular telephone, you will most likely also want to store some allowed exceptions at that telephone. For example, if you restrict long-distance calls, you will probably want to store some allowed area codes such as “1800” to allow all 1800 calls. When you enter allowed numbers, “*” is a wild card.

	Enter the allowed numbers. Each can be up to 10 digits long									
1 st Restriction										
2 nd Restriction										
3rd Restriction										
4th Restriction										
5 th Restriction										

APPENDIX D

Trouble Shooting Guide

No Display or Lamps	Make sure that the Power Transformer is plugged into an electric socket not controlled by a wall switch
No Dial Tone	Check all line connections. If possible check your jack wiring by testing a non-system telephone at the jack in question. If a standard telephone does not work, then the local telephone company lines or your house wiring may be causing the problem
The LED's are Flashing and the Display reads "Station #??"	Press soft key "Change" to assign this telephone a station number.
There is no dial tone on the handset, but the speakerphone works.	Replace the handset from another 2750 telephone. If this solves the problem, then contact Technical Support for assistance.
<p>The Intercom does not work</p> <p>Or</p> <p>The telephone does not show the status of other telephones</p> <p>Or</p> <p>There is a delay in getting dial tone</p> <p>Or</p> <p>The Telephone remains on hold after the call is picked up at another station.</p>	<p>The problem may be with your installation. Make sure that the lines are installed correctly and that line 1 is common on all system telephones.</p> <p>The cause of this problem may be from outside interference. Disconnect line one at the cable terminal. If this solves the problem, then the interference is coming from the telephone company.</p> <p>This problem may also be caused by DSL Microfilters. Never connect a line that has a DSL Circuit on Line 1.</p> <p>The problem may be caused by one defective telephone. Disconnect one instrument at a time to determine if a particular telephone is causing the problem.</p>
Crosstalk or other interference	The most common cause of crosstalk is the use of flat cable. Be sure to use supplied line cords. You must use twisted-pair line cords.
The line LED flashes when a call comes in, but the telephone does not ring.	Make sure that the Ringer is on and that "Do Not Disturb" is off.
The telephone does not operate during a power outage	Make sure that fresh AAA batteries are installed in base.
The battery icon stays lit in display	Make sure that fresh AAA batteries are installed in base.
You cannot join a telephone call in progress.	The Call Privacy feature prevents another 2740 or 2750 from interrupting a call in progress. If you don't want Call Privacy in your system, then go into system programming on station 01 and turn it off.
The telephone line status indicators stay lit, even though the line is not in use.	If this line is not connected, then program it as unconnected. If this line is connected and you have dial tone, then adjust loop voltage detector setting.

FCC INFORMATION

This equipment complies with Part 68 of the FCC rules. On the base of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

The FCC requires that you connect your telephone to the telephone network through a modular telephone outlet or jack, which must comply with FCC part 68 rules. The modular telephone outlet or jack to which your 2750 telephone must be connected is a USOC RJ11C or RJ14C. The Facility Interface code (FIC) for your 2750 telephone is 02LS2 which is a 2-wire, Local Switched Access, Loop-start.

The Ringer Equivalence Number (REN) is used to determine the quantity of devices which may be connected to the telephone line. The REN for your 2750 telephone is 0.2. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of the RENs should not exceed five (5). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If the 2750 telephone causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify you as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with your 2750 telephone, please contact **Cortelco Technical Support, 662-287-5281** for repair and/or warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved. Do not attempt to repair or modify this equipment.

Please contact **Cortelco** for information on obtaining service for this product. This equipment cannot be used on public coin service provided by the telephone company. Connection to Party Line Service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.) This equipment is hearing-aid compatible. This equipment is capable of providing users access to interstate providers of operator services through the use of access codes. Modification of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumers Act of 1990.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Automatic Dialers

When programming emergency numbers and/or making test calls to emergency numbers, remain on the line and briefly explain to the dispatcher the reason for the call before hanging up. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

TELEPHONE REPAIR

DO NOT ATTEMPT TO REPAIR THIS PRODUCT YOURSELF. Telephones manufactured by CORTELCO must be returned to us for repair. You can return your telephone to CORTELCO for repair or replacement in accordance with our LIMITED WARRANTY.

CORTELCO warrants THIS PRODUCT against defects in material and workmanship in accordance with our LIMITED WARRANTY. If your telephone is returned for repair, include a copy of your sales receipt containing the date-of-purchase. **DO NOT INCLUDE THE ORIGINAL SALES RECEIPT.** If date-of-purchase is not included, the factory date printed on the label on the bottom of your telephone will be used as the date-of purchase. The factory date allows six months for distribution and sale of this product. If you return your telephone for repair, the warranty period is not extended. The original date-of-purchase continues to apply to your warranty.

OUT-OF-WARRANTY REPAIR We will repair this product for a nominal fee after the LIMITED WARRANTY has expired if you send it to us in a complete and undamaged condition. The repaired unit will be shipped to you C.O.D., freight collect.

RETURN-FOR-REPAIR PACKAGING If you are returning a unit to us for repair, package it carefully, preferably in the original carton. Be sure to include your return address, a copy of the sales receipt showing date-of-purchase, and a note with your name, telephone number, return street address, and describe the problem that you have with your Telephone. Shipping must be prepaid. If the telephone is in warranty, it will be repaired or replaced, at our option, at no cost to you, and it will be returned shipping prepaid. Ship your telephone (shipping prepaid) to:

**CORTELCO
REPAIR CENTER
1703 SAWYER ROAD
CORINTH, MS 38834**

LIMITED WARRANTY

If you purchased this product new in the U.S. or Puerto Rico, **CORTELCO** warrants it against defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is in lieu of all other express warranties. During the warranty period, **CORTELCO** agrees to repair or, at its option, replace the defective product, or any part of it without charge for parts or labor. This is your exclusive remedy. This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, the affixing of any attachment not provided by **CORTELCO** with the product and loss of parts. The warranty is voided in the event any unauthorized person alters or repairs the unit. Telephone companies use different types of equipment and offer various types of services to customers. **CORTELCO does not warrant that this product is compatible with the type of equipment of any particular phone company or the services provided by it.**

CORTELCO DISCLAIMS ANY IMPLIED WARRANTY, INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AS OF THE DATE ONE YEAR FROM THE ORIGINAL PURCHASE OF THE PRODUCT. **CORTELCO** ASSUMES NO RESPONSIBILITY FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSION AND LIMITATION MAY NOT APPLY TO YOU.

If failure occurs and your telephone is in warranty, service shall be provided by returning it to

**CORTELCO
Repair Center,
1703 Sawyer Road,
Corinth, Mississippi 38834,**

shipping prepaid. The product will be repaired or replaced if examination by us determines the product to be defective. Telephones received damaged as a result of shipping will require you to file a claim with the carrier.